
developer.skatelescope.org

Documentation

SKA Organization

Jul 18, 2023

BACKGROUND

| | | |
|----------|--|-----------|
| 1 | Overview | 1 |
| 1.1 | System Context | 1 |
| 2 | LMC to MCS | 3 |
| 2.1 | CbfController Commands | 5 |
| 2.2 | CbfSubarray Commands | 6 |
| 3 | MCS to HPS | 9 |
| 3.1 | MCS and HPS Master DS | 9 |
| 3.2 | MCS On Command | 10 |
| 3.3 | Configure Scan Command Sequence | 11 |
| 4 | Getting Started | 15 |
| 4.1 | Developer Setup | 15 |
| 4.2 | Git Repository | 15 |
| 4.3 | Running the Mid CBF MCS | 15 |
| 4.4 | Useful Minikube Commands | 17 |
| 4.5 | Taranta | 18 |
| 4.6 | Generating Documentation | 18 |
| 4.7 | Releasing | 18 |
| 4.8 | Development resources | 19 |
| 4.9 | License | 20 |
| 5 | Code Element Design Notes | 21 |
| 5.1 | Component Managers | 21 |
| 5.2 | Cbf Controller | 21 |
| 5.3 | Cbf Subarray | 21 |
| 5.4 | FSP | 23 |
| 5.5 | Mid.Cbf VCC Device Server (VccMulti) | 23 |
| 5.6 | Talon LRU | 23 |
| 5.7 | Power Switch | 24 |
| 5.8 | Talon DX Log Consumer | 25 |
| 6 | Code | 27 |
| 6.1 | CbfComponentManager | 27 |
| 6.2 | CbfController | 30 |
| 6.3 | CbfSubarray | 36 |
| 6.4 | Fsp | 43 |
| 6.5 | Vcc | 72 |
| 6.6 | PowerSwitch | 84 |
| 6.7 | TalonLRU | 89 |

| | |
|----------------------------------|-----------|
| 6.8 TalonDxLogConsumer | 92 |
| 7 Indices and tables | 93 |
| Python Module Index | 95 |
| Index | 97 |

OVERVIEW

The Mid.CBF Master Control Software (MCS) provides a high-level interface to the Telescope Monitoring and Control (TMC) and CSP_Mid Local Monitoring and Control (LMC), and translates the high-level commands into the configuration and control of individual Talon-DX boards.

1.1 System Context

The following diagram shows MCS as it fits into the rest of the CSP Mid system.


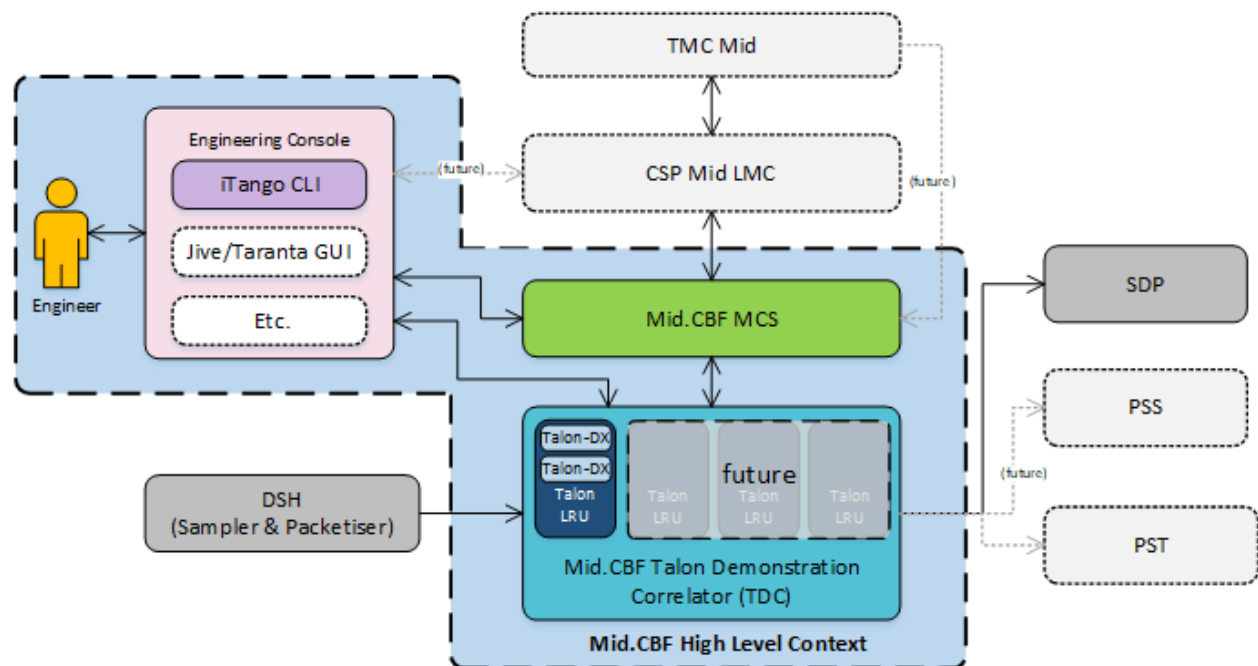


Fig. 1: MCS System Context

MCS interacts with TMC and CSP_Mid LMC and controls the applications and low-level device servers that run on the hard processor system (HPS) of the Talon-DX boards. The diagram below shows these interactions. TMC and CSP_Mid LMC interact with the CBF Controller and CBF Subarray. The diagram also shows the Engineering Console and pytest-BDD elements which are used to test the interfaces between MCS and TMC/CSP_Mid LMC during development.

In MCS there is one VCC device and one FSP device for each VCC/FSP in the system. These devices communicate directly with the top level HPS application for the reconfiguration of the Talon-DX functionality (VCC Controller / HPS FSP Controller)

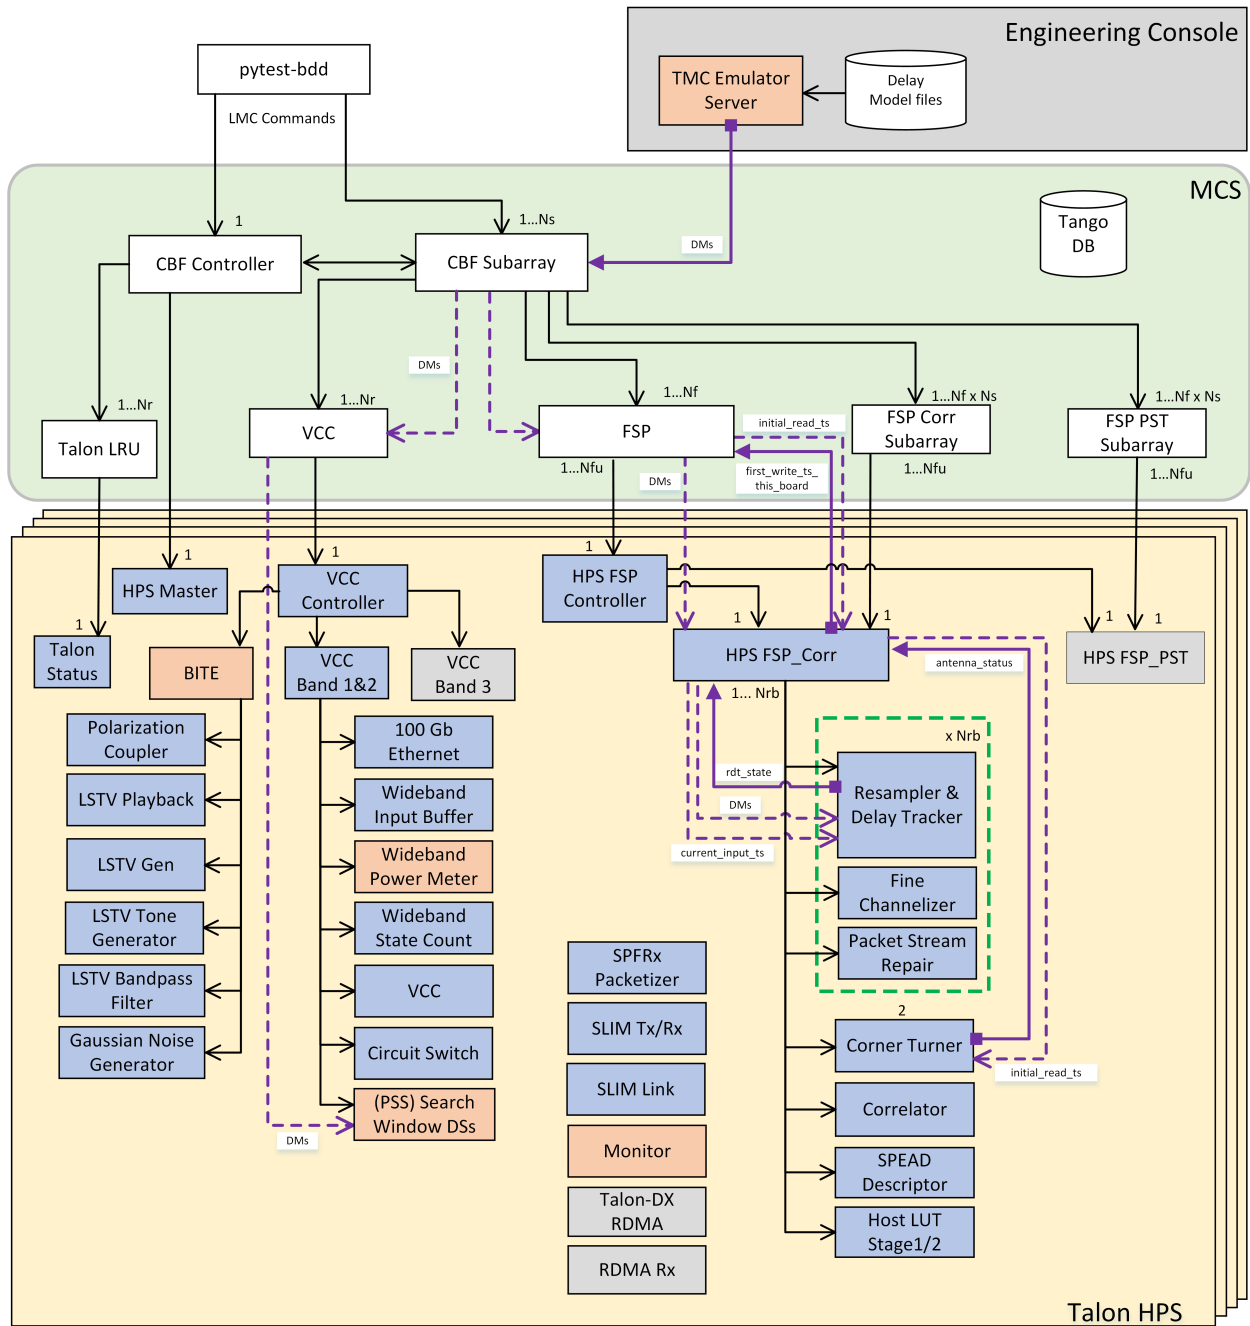


Nr = Max number of Receptors (= 4*)
 Nf = Max number of FSPs (=4*)
 Ns = Max number of Subarrays (=2*)
 Nfu = Number of FPGAs in an FSP-UNIT
 Nrb = Number of receptor data streams per board
 * : Current MCS values
 Note: for TDC, Nr = Nf, Nrb = 8, Nfu = 1

Publish-Subscribe
 Data sent on callback triggered by event
 Command/Attribute
 Per-receptor processing
 Device Server
 Disabled Device Server
 Not currently implemented

LMC TO MCS

MCS provides commands and attributes to turn MCS on and off (through the CBF Controller) as well as commands needed to configure and execute scans through the subarrays. (CBF Subarray)

The sequence diagram below shows the interactions between LMC and MCS to assign receptors to a subarray, configure a scan, and run a scan. It shows configuration of one Mid.CBF subarray followed by running a scan on that subarray. It ends with no receptors assigned to the subarray. The calls to write the frequency offset K and frequency offset delta F values only need to be written when there are updates to the values. They must be written to the CBF Controller before the scan configuration.

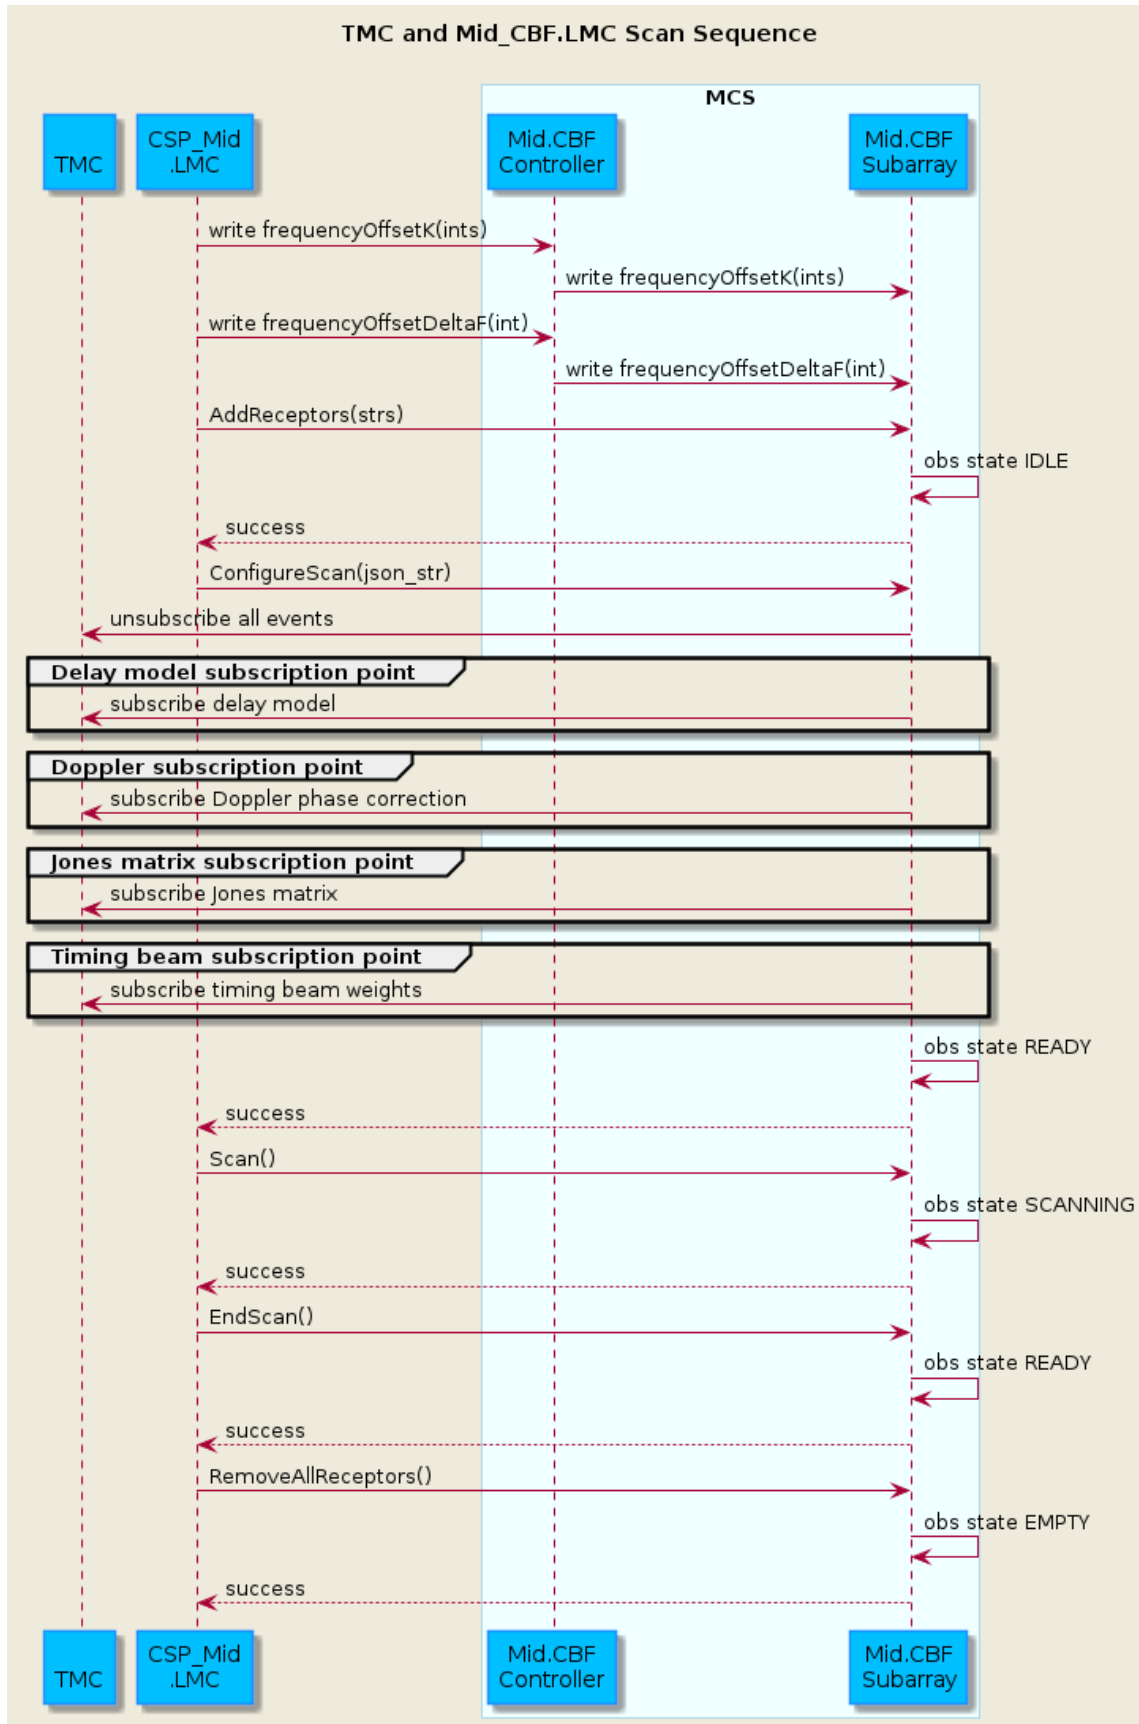

Commands for CbfController and CbfSubarray are below. For full details of MCS Controller see [CbfController](#). For full details of MCS Subarray see [CbfSubarray](#).

2.1 CbfController Commands

2.1.1 On

```
class ska_mid_cbf_mcs.controller.controller_device.CbfController.OnCommand(*args: Any,
                                                                    **kwargs: Any)
```

A class for the CbfController's On() command.

do() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for On() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

2.1.2 Off

```
class ska_mid_cbf_mcs.controller.controller_device.CbfController.OffCommand(*args: Any,
                                                                    **kwargs: Any)
```

A class for the CbfController's Off() command.

do() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for Off() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

2.1.3 Standby

```
class ska_mid_cbf_mcs.controller.controller_device.CbfController.StandbyCommand(*args: Any,
                                                                    **kwargs: Any)
```

A class for the CbfController's Standby() command.

do() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for Standby() command functionality. Turn off subarray, vcc, fsp, turn CbfController to standby

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type
(`ResultCode`, `str`)

2.2 CbfSubarray Commands

2.2.1 Add Receptors

```
class ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.AddReceptorsCommand(*args: Any,
                                                                              **kwargs:
                                                                              Any)
```

A class for CbfSubarray's AddReceptors() command.

do(*argin*: *List[str]*) → *Tuple*[*ska_tango_base.commands.ResultCode*, *str*]

Stateless hook for AddReceptors() command functionality.

Parameters

argin – The receptors to be assigned

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

2.2.2 Configure Scan

```
class ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.ConfigureScanCommand(*args: Any,
                                                                              **kwargs:
                                                                              Any)
```

A class for CbfSubarray's ConfigureScan() command.

do(*argin*: *str*) → *Tuple*[*ska_tango_base.commands.ResultCode*, *str*]

Stateless hook for ConfigureScan() command functionality.

Parameters

argin – The configuration as JSON formatted string.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

validate_input(*argin*: *str*) → *Tuple*[*bool*, *str*]

Validate scan configuration.

Parameters

argin – The configuration as JSON formatted string.

Returns

A tuple containing a boolean indicating if the configuration is valid and a string message. The message is for information purpose only.

Return type
(bool, str)

2.2.3 Scan

class ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.**ScanCommand**(*args: *Any*, **kwargs: *Any*)

A class for CbfSubarray's Scan() command.

do(argin: *str*) → *Tuple*[ska_tango_base.commands.ResultCode, *str*]

Stateless hook for Scan() command functionality.

Parameters

argin (*str*) – The scan ID as JSON formatted string.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, *str*)

2.2.4 Remove Receptors

class ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.**RemoveReceptorsCommand**(*args: *Any*, **kwargs: *Any*)

A class for CbfSubarray's RemoveReceptors() command. Equivalent to the ReleaseResourcesCommand in ADR-8.

do(argin: *List*[*str*]) → *Tuple*[ska_tango_base.commands.ResultCode, *str*]

Stateless hook for RemoveReceptors() command functionality.

Parameters

argin – The receptors to be released

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, *str*)

2.2.5 Remove All Receptors

class ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.**RemoveAllReceptorsCommand**(*args: *Any*, **kwargs: *Any*)

A class for CbfSubarray's RemoveAllReceptors() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for `RemoveAllReceptors()` command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

2.2.6 End Scan

class `ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.EndScanCommand(*args: Any, **kwargs: Any)`

A class for `CbfSubarray`'s `EndScan()` command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for `EndScan()` command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

MCS TO HPS

The interface from the MCS to the HPS is largely in the form of communication between Tango devices running on either side.

The interface also currently consists of low-level SSH calls from the MCS to the Talon-DX boards, which are used to copy FPGA bitstreams and Tango device server binaries to the boards and start the HPS Master process. This functionality may be moved in the future, but for now it is implemented in the *TalonDxComponentManager Class*, which is instantiated by the *CbfController*.

3.1 MCS and HPS Master DS

The interface between the MCS and the HPS Master device server is primarily made up of the `configure` command sent from the MCS to the HPS master, which programs the FPGA and spawns the remaining HPS device servers. Before this command can be run, it is expected that the MCS has already copied the necessary bitstreams and binaries to the board and the HPS master has obviously been started. This is all handled automatically as part of the *MCS On Command*.

The `configure` command has one argument, which is a JSON-formatted string. An example of its contents can be seen below.

```
{
  "description": "Configures Talon DX to run VCC firmware and devices.",
  "target": "talon1",
  "ip_address": "169.254.100.1",
  "ds_hps_master_fqdn": "talondx-001/hpsmaster/hps-1",
  "fpga_path": "/lib/firmware",
  "fpga_dtb_name": "vcc3_2ch4.dtb",
  "fpga_rbf_name": "vcc3_2ch4.core.rbf",
  "fpga_label": "base",
  "ds_path": "/lib/firmware/hps_software/vcc_test",
  "server_instance": "talon1_test",
  "devices": [
    "dscircuitswitch",
    "dsdct",
    "dsfinechannelizer",
    "dstalondxrdma",
    "dsvcc"
  ]
}
```

3.2 MCS On Command

The following diagram shows the CbfController On command sequence and how it integrates with other components in the Mid.CBF system. The steps are outlined in detail in the [Engineering Console](#).

From a MCS perspective, the On command sequence consists of the following steps:

- Arrows 4-7: Power on the Talon-DX boards
- Arrow 9: Attempt to connect to each board over SSH (see *TalonDxComponentManager Class*)
- Arrows 8-9: Copy the relevant binaries and bitstreams to each board
- Arrow 10: Start up the HPS Master on each board
- Arrow 12: Send the configure to each HPS Master device server


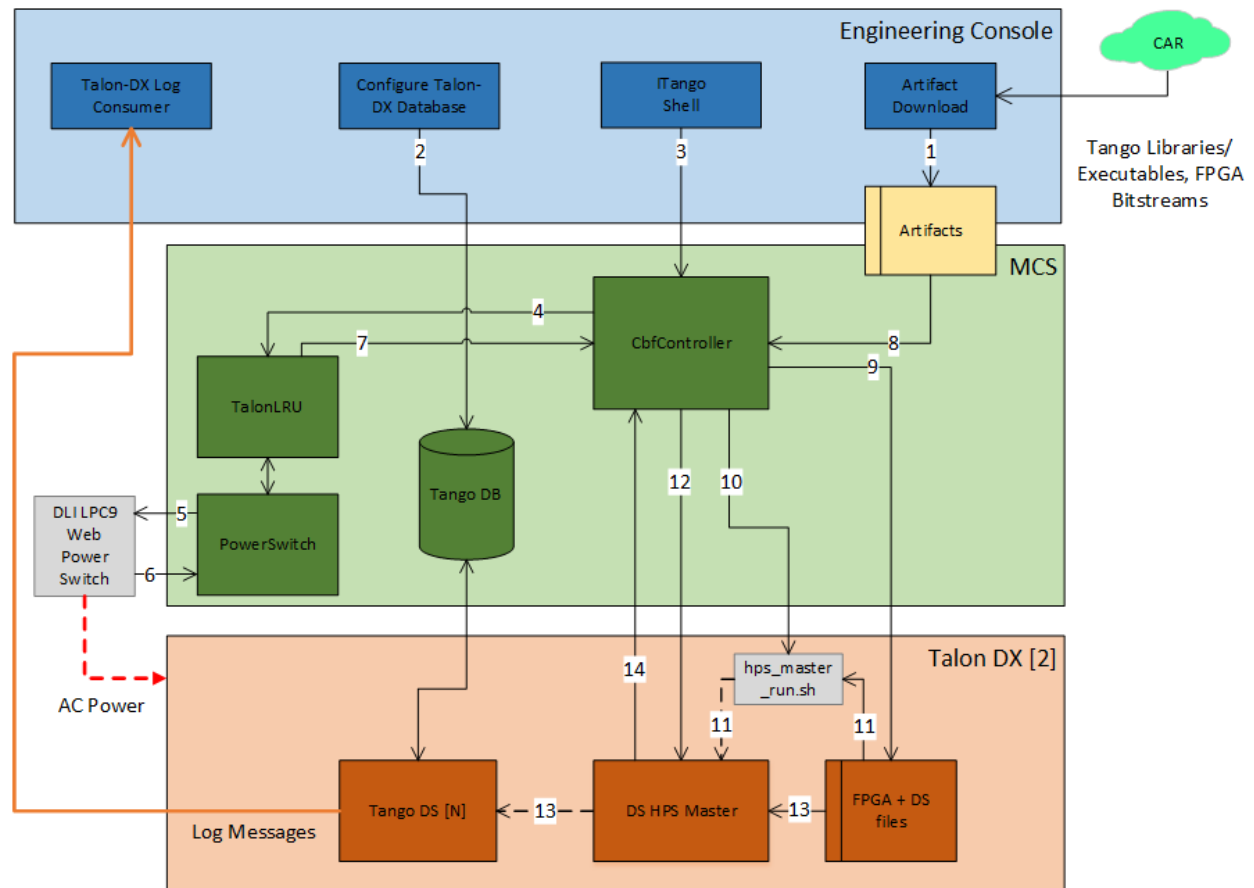



Fig. 1: MCS On Command Sequence

3.3 Configure Scan Command Sequence


The sequence diagram below shows the main sequence of calls in MCS to configure a correlation scan. Return calls are not shown.

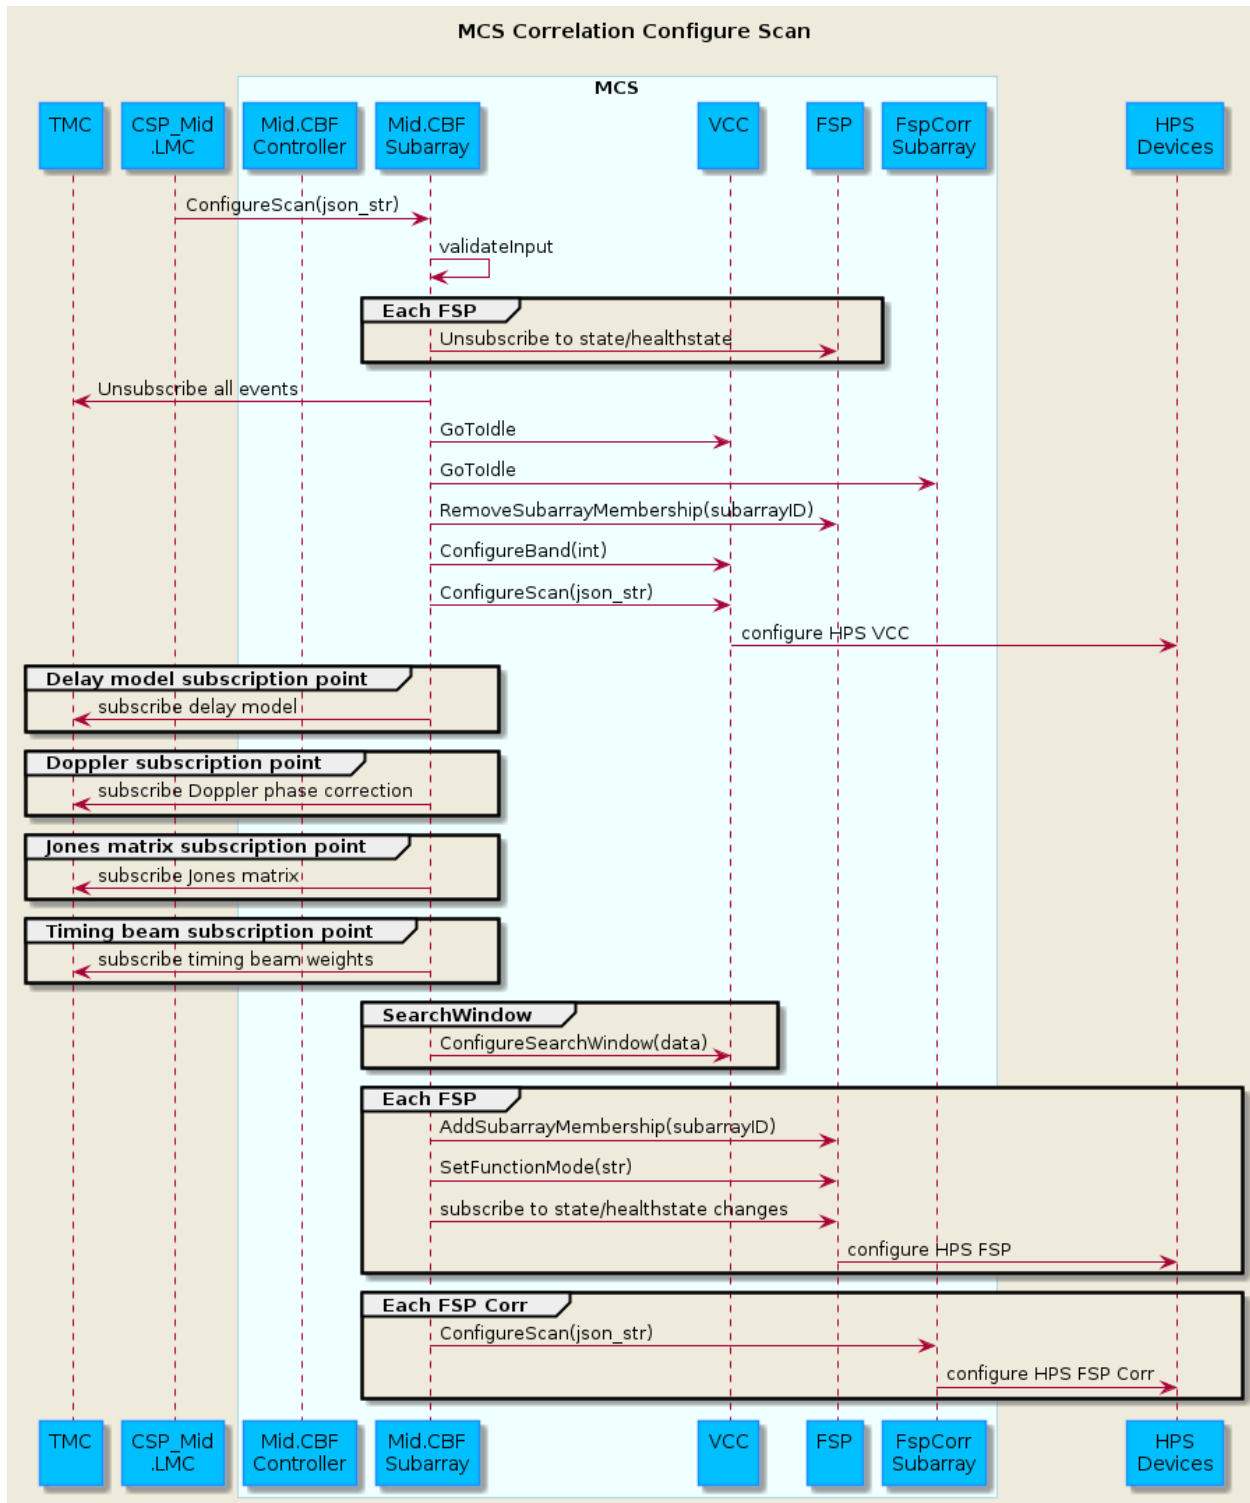

The sequence diagram below shows additional detail for configuration of the VCC for a correlation scan.

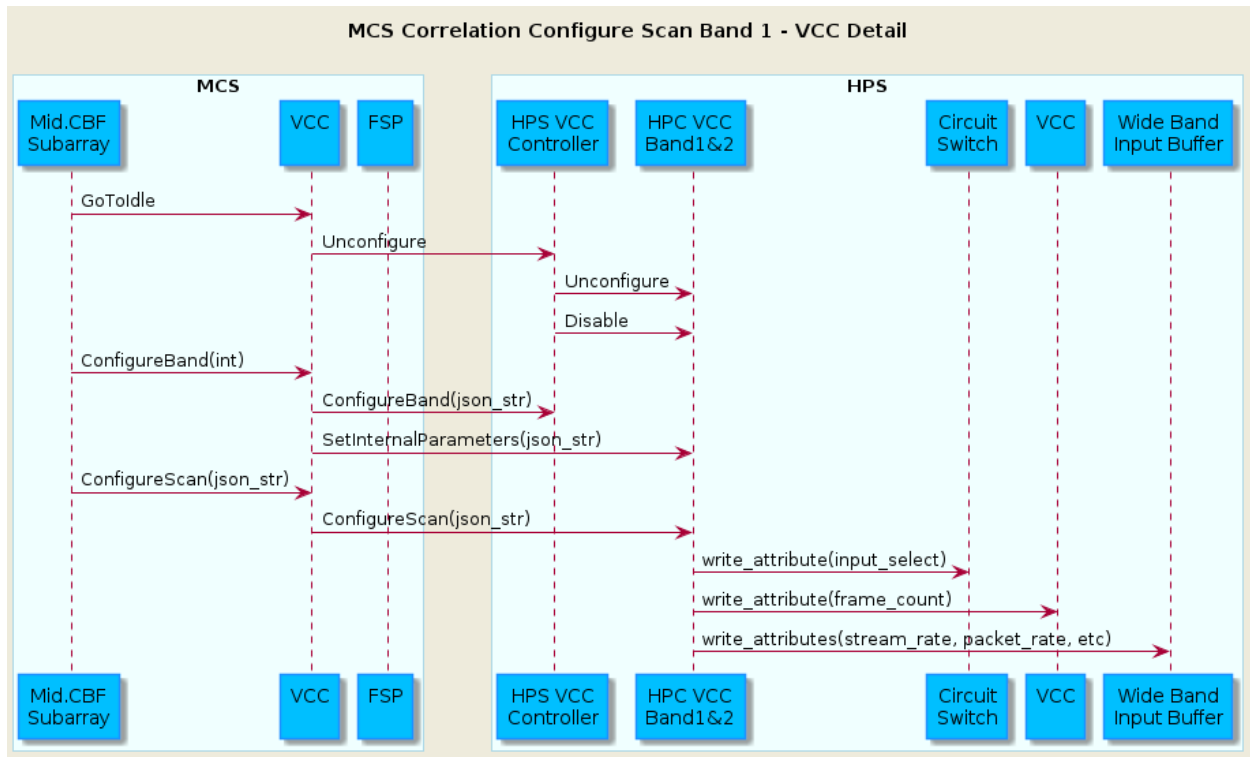

The sequence diagram below shows details of calls to configure a FSP for a correlation scan.

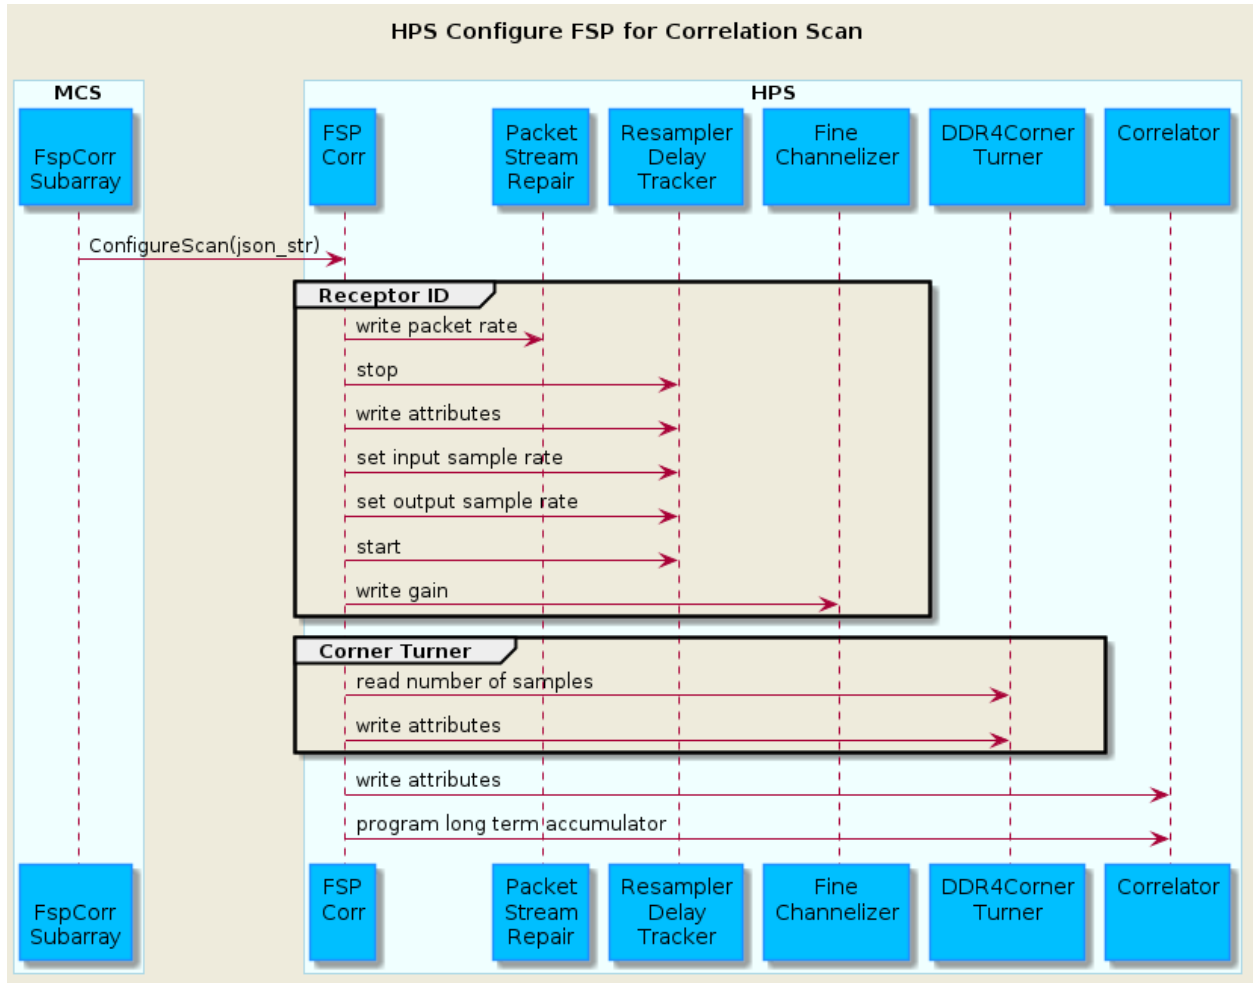

GETTING STARTED

4.1 Developer Setup

This section follows the instructions on the SKA developer's portal:

- Dev Environment Setup
- Dev FAQs

4.2 Git Repository

The MCS Git Repository is available at the following page: <https://gitlab.com/ska-telescope/ska-mid-cbf-mcs>

The README on the repository will guide users through cloning and initializing the repository.

4.3 Running the Mid CBF MCS

The ska-mid-cbf-mcs Tango device servers are started and run via Kubernetes.

Make sure Kubernetes/minikube and Helm have been installed (and verified) as described in the 'Set up Kubernetes' section.

Note: You may need to change permission to the .minikube and .kube files in your home directory:

```
sudo chown -R <user_name>:<user_name> ~/.minikube/  
sudo chown -R <user_name>:<user_name> ~/.kube/
```

4.3.1 1. Make sure minikube is up and running

The following commands use the default minikube profile. If you are running the MCS on the Dell server you will need to set up your own minikube profile. A new minikube profile is needed for a new cluster, so creating minikube profiles ensures two users on the Dell server do not work on the same cluster at the same time. To view the modifications needed to run the following commands on a new minikube profile see Minikube Profiles

```
minikube start    # start minikube (local kubernetes node)  
minikube status  # check current status of minikube
```

The minikube status output should be:

```
minikube
type: Control Plane
host: Running
kubelet: Running
apiserver: Running
kubeconfig: Configured
```

If restarting a stopped minikube; from local ska-cicd-deploy-minikube repository run `make minikube-metallb-config` to reapply metallb configMap to determine pod LoadBalancer service external IP addresses.

4.3.2 2. From the root of the project, build the application image.

```
cd ska-mid-cbf-mcs
eval $(minikube docker-env)    # to use the minikube's docker environment
make oci-image-build          # if building from local source and not artefact repository
```

`make oci-image-build` is required only if a local image needs to be built, for example every time the SW has been updated. For development, in order to get local changes to build, run `eval $(minikube docker-env)` before `make build`

Note: To check if you are within the minikube's docker environment, use the `minikube status` command. It will indicate `docker-env: in use` if in use as follows:

```
minikube
type: Control Plane
host: Running
kubelet: Running
apiserver: Running
kubeconfig: Configured
docker-env: in-use
```

4.3.3 3. Install the umbrella chart.

```
make k8s-install-chart        # deploy from Helm charts
make k8s-install-chart-only   # deploy from Helm charts without updating dependencies
```

Note: `make k8s-watch` will list all of the pods' status in every 2 seconds using `kubectl`; `make k8s-wait` will wait until all jobs are 'Completed' and pods are 'Running'.

4.3.4 4. (Optional) Create python virtual environment to isolate project specific dependencies from your host environment.

```
virtualenv venv                # create python virtualenv 'venv'
source venv/bin/activate       # activate venv
```

4.3.5 5. Install linting and testing requirements.

```
make requirements
```

4.3.6 6. Install the MCS package in editable mode.

```
pip install -e .
```

4.3.7 7. Run a test.

```
make k8s-test # functional tests with an already running deployment
make python-test # unit tests, deployment does not need to be running
```

Note: add `-k pytest` flags in `setup.cfg` in the project root to limit which tests are run

4.3.8 8. Tear down the deployment.

```
make k8s-uninstall-chart # uninstall deployment from Helm charts
deactivate # if in active virtualenv
eval $(minikube docker-env --unset) # if docker-env variables were set previously
minikube stop # stop minikube
```

4.4 Useful Minikube Commands

4.4.1 Create a minikube

```
minikube start
```

4.4.2 Check the status of the cluster created for your minikube

```
minikube status
```

4.4.3 Fixing a Misconfigured Kubeconfig

If the kubeconfig is pointing to a stale minikube and is showing as **Misconfigured** when checking the minikube status, or if the minikube's IP or port has changed, update the context as follows:

```
minikube update-context
```

4.4.4 Delete a minikube profile

```
minikube delete
```

4.4.5 Set and unset docker-env variables

```
eval $(minikube docker-env)
eval $(minikube docker-env --unset)
```

4.5 Taranta

This provides a graphical user interface using Taranta (previously known as WebJive); to set it up:

- Add the following line to `/etc/hosts`:

```
192.168.49.2 taranta
```

Note: 192.168.49.2 is the minikube IP address, obtainable with the command `minikube ip`

- Navigate to `taranta/ska-mid-cbf/taranta/devices` in a browser (works best with Google Chrome).

The following credentials can be used to operate the system:

- Username: `user1`
- Password: `abc123`

The device tree can be viewed and explored. In addition, device attributes can be seen and modified, and device commands can be sent, by creating and saving a new dashboard.

4.6 Generating Documentation

To re-generate the documentation locally prior to checking in updates to Git:

```
make docs-build html
```

To see the generated documentation, open `/ska-mid-cbf-mcs/docs/build/html/index.html` in a browser – e.g.,

```
firefox docs/build/html/index.html &
```

4.7 Releasing

For a new release (i.e. prior to merging a branch into main) update the following files by incrementing version/release/tag number fields to conform to the semantic versioning convention:

- `.release`: `release=` and `tag=`
- `src/ska_mid_cbf_mcs/release.py`: `version =`
- `charts/ska-mid-cbf/Chart.yaml`: `version:` and `appVersion:`
- `charts/ska-mid-cbf/values.yaml`: `midcbf:image:tag:`

- charts/ska-mid-cbf-tmleafnode/Chart.yaml: version: and appVersion:
- charts/ska-mid-cbf-tmleafnode/values.yaml: midcbf:image:tag:
- charts/mid-cbf-umbrella/Chart.yaml:
 - version: and appVersion:
 - version: under ska-mid-cbf and ska-mid-cbf-tmleafnode

Note: appVersion represents the version of the application running, so it corresponds to the ska-mid-cbf-mcs docker image version.

Once a new release has been merged into main, create a new tag on GitLab and run the manual “publish-chart” stage of the tag pipeline to publish the Helm charts.

4.8 Development resources

4.8.1 Other resources

See more tango device guidelines and examples in the `ska-tango-examples` repository

4.8.2 Useful commands

Kubernetes

For Kubernetes basic kubectl commands see: <https://kubernetes.io/docs/reference/kubectl/cheatsheet/>

To display components of the MCS Kubernetes system:

```
kubectl get all -n ska-mid-cbf
kubectl describe <component-name> -n ska-mid-cbf # info on a particular component
```

This should list the following running pods:

- `cbfcontroller-controller-0` : The CbfController TANGO device server.
- `cbfsubarrayxx-cbf-subarray-xx-0`: `xx` ranges from `01` to `03`. The 3 instances of the CbfSubarray TANGO device server.
- `fspxx-fsp-xx-0`: `xx` ranges from `01` to `04`. The 4 instances of the FspMulti TANGO device servers.
- `vccxxx-vcc-xxx-0`: `xxx` ranges from `001` to `004`. The 4 instances of the VccMulti TANGO device servers.
- `tmcspsubarrayleafnodetestx-tmx-0`: `x` ranges from `1` to `2`. The 2 instances of the TmCspSubarrayLeafNodeTest TANGO device servers.
- `tango-host-databases-from-makefile-test-0`: The TANGO DB device server.
- etc.

4.9 License

See the LICENSE file for details.

CODE ELEMENT DESIGN NOTES

5.1 Component Managers

More details about the role of component managers can be found in the [SKA Tango Base Documentation](#). In the Mid.CBF MCS each component has a Tango device class and a component manager class. The Tango device class updates its state model(s) (the `op_state_model` and/or `obs_state_model`). The Tango device class does not directly communicate with its component, instead it tells its component manager class what to do by calling its methods. The component manager class directly interacts with its component. Its role is to establish communication with its component and monitor and control it. An example of this Tango device and component manager interaction is shown in the diagram below.

5.2 Cbf Controller


The `CbfController` Tango device controls its subordinate Tango devices: `Fsp`, `Vcc`, `CbfSubarray` and `TalonLRU`. It is responsible for turning these subordinate devices on and off, and putting the `Fsp`, `Vcc` and `CbfSubarray` devices in STANDBY mode. The `CbfController` also initiates the configuration of the Talon-DX boards. The `CbfController` device's `OnCommand` triggers `TalonDxComponentManager.configure_talons` to be called which copies the device server binaries and FPGA bitstream to the Talon-DX boards, starts the HPS master device server and sends the configure command to each `DsHpsMaster` device.

5.3 Cbf Subarray

The `CbfSubarray` Tango device is used to monitor and control scan operation of a Mid.CBF receptor subarray. This device receives one configuration per scan, and a subarray may accept this scan configuration only after being assigned at least one receptor.

5.3.1 Receptor assignment

Receptor assignment to a subarray is done before configuration for a scan. Receptor assignment is exclusive; receptors assigned to one subarray cannot belong to any other subarray. Up to 197 receptors can be assigned to one subarray; currently, there is only support for 4 receptors.

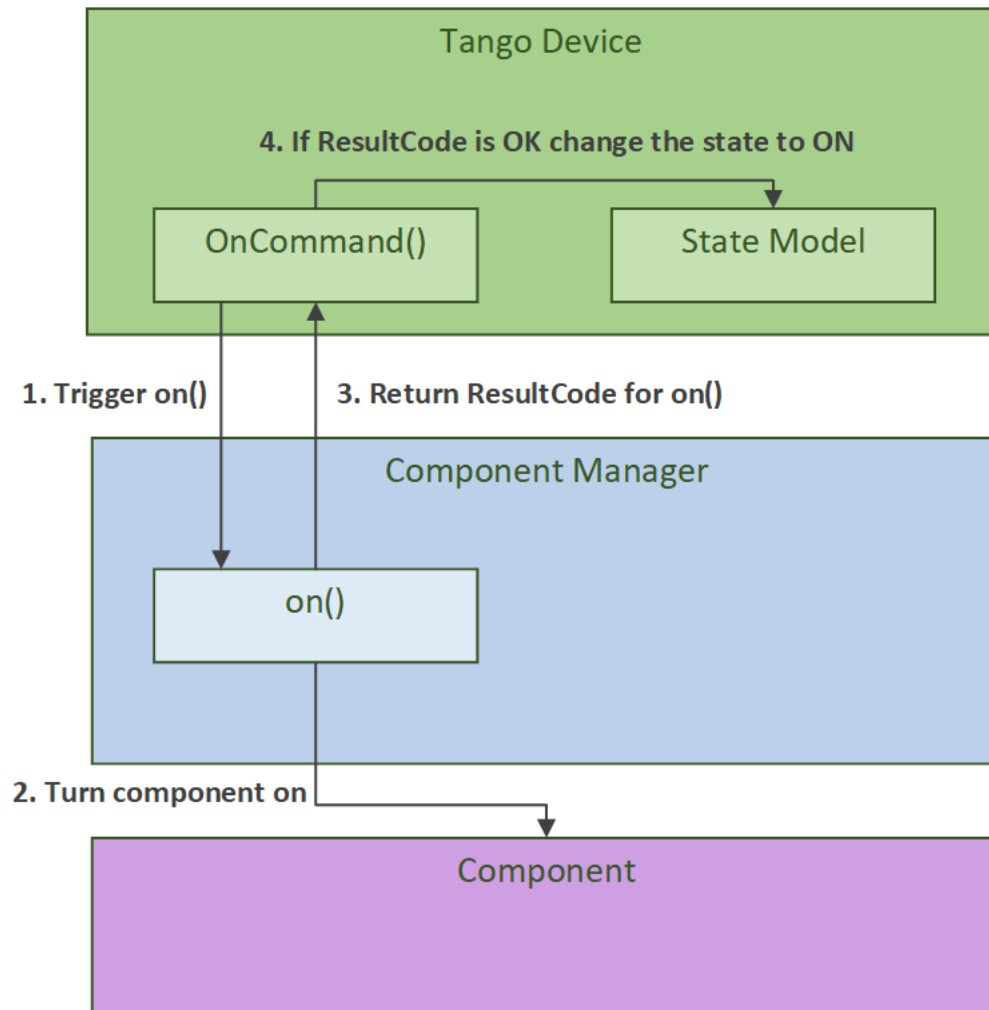

5.3.2 Scan configuration

Subarrays receive a scan configuration via an ASCII encoded JSON string. The scan configuration is validated for completeness and its parameters implemented as Tango device attributes; the subarray device will then also configure subordinate devices with the relevant parameters, including VCC, FSP and FSP-subarray devices.

5.4 FSP

The Fsp Tango device is used for monitoring and control of a Frequency Slice Processor (FSP) during scan operation. An FSP device can be configured for processing of one of up to twenty-six frequency slices (depending on observational frequency band). Additionally, an FSP can be assigned to any number of subarrays with matching configurations.

5.4.1 Fsp Function Mode

There are four function modes available for FSP scan configuration, each with a corresponding function mode capability and subarray device per FSP; furthermore, each FSP function mode subarray device corresponds to a unique pairing of one FSP with one subarray. Currently, one subarray and four FSPs are supported.

FSP Function Mode Subarray devices:

- Correlation (CORR): FspCorrSubarray
- Pulsar Search Beamforming (PSS-BF): FspPssSubarray
- Pulsar Timing Beamforming (PST-BF): FspPstSubarray
- VLBI Beamforming (VLBI): FspVlbiSubarray

5.5 Mid.Cbf VCC Device Server (VccMulti)

5.5.1 VCC Device

The Vcc Tango device is used to control and monitor the functionality for a single Talon-DX board that runs VCC functionality. This device communicates with the top-level VCC device server running on the Talon-DX board to coordinate setup and processing activities of low-level device servers.

The Vcc device can operate in either simulation mode or not. When in simulation mode (this is the default), simulator classes are used in place of communication with the real Talon-DX Tango devices. This allows testing of the MCS without any connection to the hardware.

5.6 Talon LRU

The TalonLRU Tango device handles the monitor and control functionality for a single Talon LRU. A TalonLRU instance must therefore be created for each LRU. Currently this device only controls the power to the LRU via a proxy to the PowerSwitch device.

The operational state of this device always reflects the power state of the LRU. If at least one of the PDU outlets connected to the LRU is switched on, the state of the TalonLRU device should be ON. If both outlets are switched off, then the state should be OFF.

If the state of the outlets is not consistent with the state of the TalonLRU device when it starts up (or when `simulationMode` of the PowerSwitch device changes), the TalonLRU device transitions into a FAULT state. The

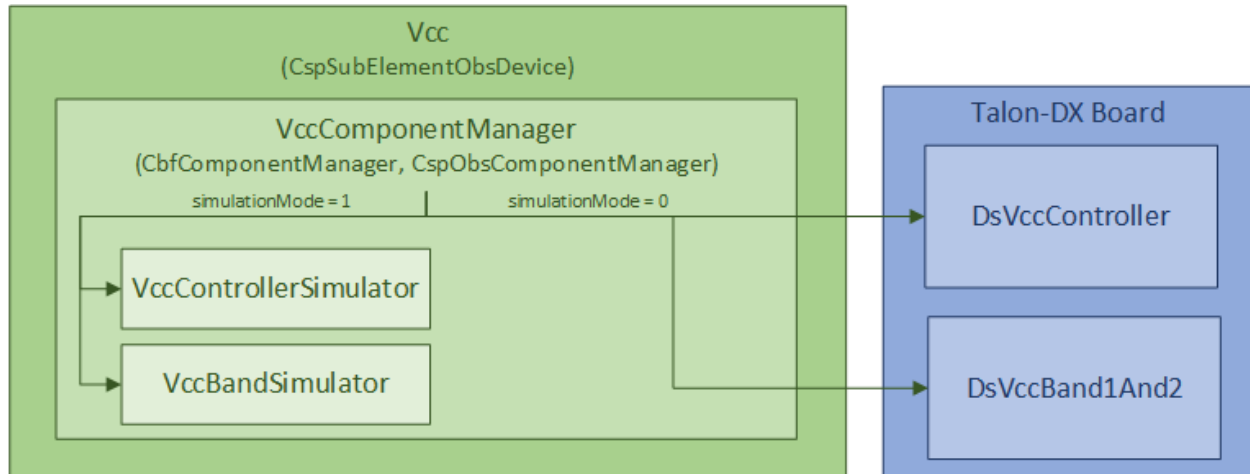


Fig. 1: MCS Vcc Device

power outlets must then be manually switched to the expected startup state via some other method before resetting the TalonLRU device.

The expected startup state of the device is OFF.

5.7 Power Switch

The PowerSwitch Tango device is used to control and monitor the web power switch that provides power to the Talon LRUs. The current power switch in use is the DLI LPC9 ([User Guide](#)). The power switch has 8 programmable outlets, meaning that it can power up to 4 Talon LRUs (each LRU needs two power supply lines).

The PowerSwitch device can be operated in either simulation mode or not. When in simulation mode (this is the default), the PowerSwitchSimulator is used in place of communication with the real power switch hardware. This allows testing of the MCS with no hardware connected.

When integration testing with the hardware is desired, the `simulationMode` attribute can be set to 0. This initializes communication with the real power switch via the PowerSwitchDriver, and queries the list of outlets in the power switch.

Important operational notes:

- Certain requests to the power switch hardware can take longer than others, hence a timeout of 4 seconds set in the PowerSwitchDriver. As such, accessing attributes or commands in the PowerSwitch device can take longer than the default Tango timeout (3 seconds). Any DeviceProxy of the PowerSwitch device should increase its timeout to 5 seconds to safely complete all requests (both successful and unsuccessful) before the Tango timeout. This can be done using `pwr_dev_proxy.set_timeout_millis(5000)`, assuming `pwr_dev_proxy` is a DeviceProxy to the PowerSwitch device.
- Although the DLI LPC9 claims to support up to 8 concurrent clients, testing has shown a significant slow down in response time when more than one request has been sent to the power switch. As such, all communication with the power switch should be kept sequential. Currently the PowerSwitchDriver does not ensure this. If the PowerSwitch device is ever changed to handle requests asynchronously, the PowerSwitchDriver should also be updated to only process one request at a time.

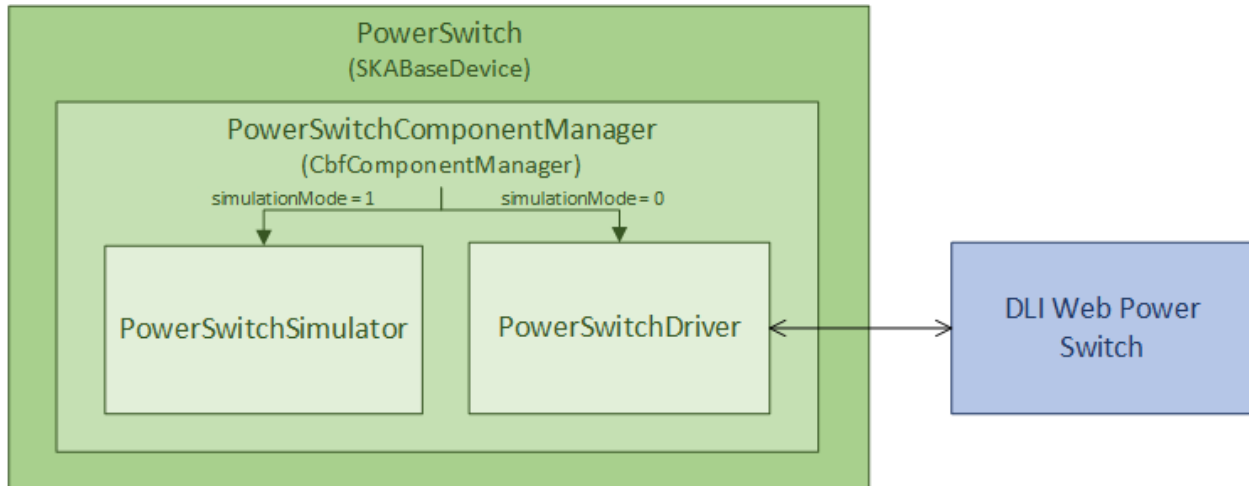


Fig. 2: MCS PowerSwitch Device

5.8 Talon DX Log Consumer

The Talon DX Log Consumer is a Tango device intended to run on the host machine that connects to the Talon-DX boards. This Tango device is set up as a default logging target for all the Tango device servers running on the HPS of each Talon-DX board. When the HPS device servers output logs via the Tango Logging Service, the logs get transmitted to this log consumer device where they get converted to the SKA logging format and outputted once again via the SKA logging framework. In this way logs from the Talon-DX boards can be aggregated in once place and eventually shipped to the Elastic framework in the same way as logs from the Mid CBF Monitor and Control Software (MCS).

Note: more instances of the device may be created to provide enough bandwidth for all the HPS device servers.

5.8.1 Connecting from HPS DS to the Log Consumer

The Talon-DX boards connect to the host machine (currently known as the development server) over a single Ethernet connection. The IP address of the development server on this connection is 169.254.100.88 and all outgoing traffic from the Talon-DX boards must be addressed to this IP.

When the log consumer starts up on the development server, the OmniORB end point (IP address and port) it is assigned is local to the development server (i.e. IP address 142.73.34.173, arbitrary port). Since the Talon boards are unable to connect to this IP address, we need to manually publish a different endpoint when starting up the log consumer that is visible to the HPS devices.

The following ORB arguments are used (see the make target `talondx-log-consumer`):

- `-ORBEndPointPublish giop:tcp:169.254.100.88:60721`: Exposes this IP address and port to all clients of this Tango device. When the HPS device servers contact the database to get the network information of the log consumer, this is the IP address and port that is returned. The IP addresses matches that of the Ethernet connection to the development server, allowing the HPS device servers to direct their messages across that interface.
- `-ORBEndPoint giop:tcp:142.73.34.173:60721`: Assigns the IP address and port that the log consumer device is actually running on. This needs to be manually assigned since an iptables mapping rule was created on the development server to route any TCP traffic coming in on 169.254.100.88:60721 to 142.73.34.173:60721.

Some important notes:

- Due to the end point publishing, no Tango devices running on the development server will be able to connect to the log consumer (including being able to configure the device from Jive). This is because the published IP address is not accessible on the development server. There may be a way to publish multiple endpoints, but this needs further investigation.
- If the log consumer device cannot be started due to an OmniORB exception saying that the end point cannot be created, it is possible that the 142.73.34.173 needs to change to something else. It is not yet clear why this can happen. To change it do the following:
 - Remove the ORB arguments from the `talondx-log-consumer` make target, and then start the log consumer.
 - Open up Jive and look at what IP address is automatically assigned to the log consumer device. This is the IP address that we now need to use for the endpoint.
 - Find the iptables rule that maps 169.254.100.88:60721 to 142.73.34.173:60721, and change it to the new IP address.
 - Add the ORB arguments back in, using the correct IP address for the end point.

6.1 CbfComponentManager

6.1.1 CbfComponentManager Class

```
class ska_mid_cbf_mcs.component.component_manager.CbfComponentManager(*args: Any, **kwargs: Any)
```

Bases: BaseComponentManager

A base component manager for SKA Mid.CBF MCS

This class exists to modify the interface of the `ska_tango_base.base.component_manager.BaseComponentManager`. The `BaseComponentManager` accepts an `op_state_model` argument, and is expected to interact directly with it. This is not a very good design decision. It is better to leave the `op_state_model` behind in the device, and drive it indirectly through callbacks.

Therefore this class accepts three callback arguments: one for when communication with the component changes, one for when the power mode of the component changes, and one for when the component fault status changes. In the last two cases, callback hooks are provided so that the component can indicate the change to this component manager.

start_communicating() → None

Start communicating with the component.

stop_communicating() → None

Break off communicating with the component.

update_communication_status(communication_status: CommunicationStatus) → None

Handle a change in communication status.

This is a helper method for use by subclasses.

Parameters

communication_status – the new communication status of the component manager.

property is_communicating: bool

Return communication with the component is established.

SKA Mid.CBF MCS uses the more expressive `communication_status` for this, but this is still needed as a base classes hook.

Returns

whether communication with the component is established.

property communication_status: `CommunicationStatus`

Return the communication status of this component manager.

This is implemented as a replacement for the `is_communicating` property, which should be deprecated.

Returns

status of the communication channel with the component.

update_component_power_mode(*power_mode*: `Optional[ska_tango_base.control_model.PowerMode]`) → `None`

Update the power mode, calling callbacks as required.

This is a helper method for use by subclasses.

Parameters

power_mode – the new power mode of the component. This can be `None`, in which case the internal value is updated but no callback is called. This is useful to ensure that the callback is called next time a real value is pushed.

component_power_mode_changed(*power_mode*: `ska_tango_base.control_model.PowerMode`) → `None`

Handle notification that the component's power mode has changed.

This is a callback hook, to be passed to the managed component.

Parameters

power_mode – the new power mode of the component

property power_mode: `Optional[ska_tango_base.control_model.PowerMode]`

Return the power mode of this component manager.

Returns

the power mode of this component manager.

update_component_fault(*faulty*: `Optional[bool]`) → `None`

Update the component fault status, calling callbacks as required.

This is a helper method for use by subclasses.

Parameters

faulty – whether the component has faulted. If `False`, then this is a notification that the component has *recovered* from a fault.

component_fault_changed(*faulty*: `bool`) → `None`

Handle notification that the component's fault status has changed.

This is a callback hook, to be passed to the managed component.

Parameters

faulty – whether the component has faulted. If `False`, then this is a notification that the component has *recovered* from a fault.

property faulty: `Optional[bool]`


Return whether this component manager is currently experiencing a fault.

Returns


whether this component manager is currently experiencing a fault.

The MCS contains two types of Tango devices: observing and non-observing. Non-observing devices contain only an `op_state_model` while observing devices contain both an `op_state_model` and `obs_state_model`. As shown in the inheritance diagram below, non-observing devices inherit from `CbfComponentManager` while observing devices inherit from `CbfComponentManager` and `CspObsComponentManager`.

Non-Observing Device Inheritance

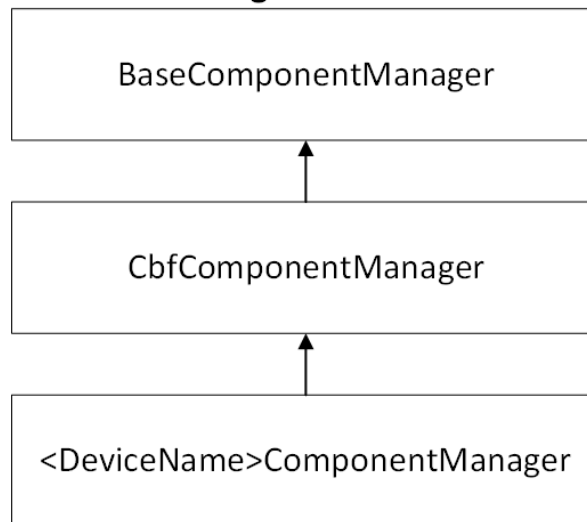

Observing Device Inheritance

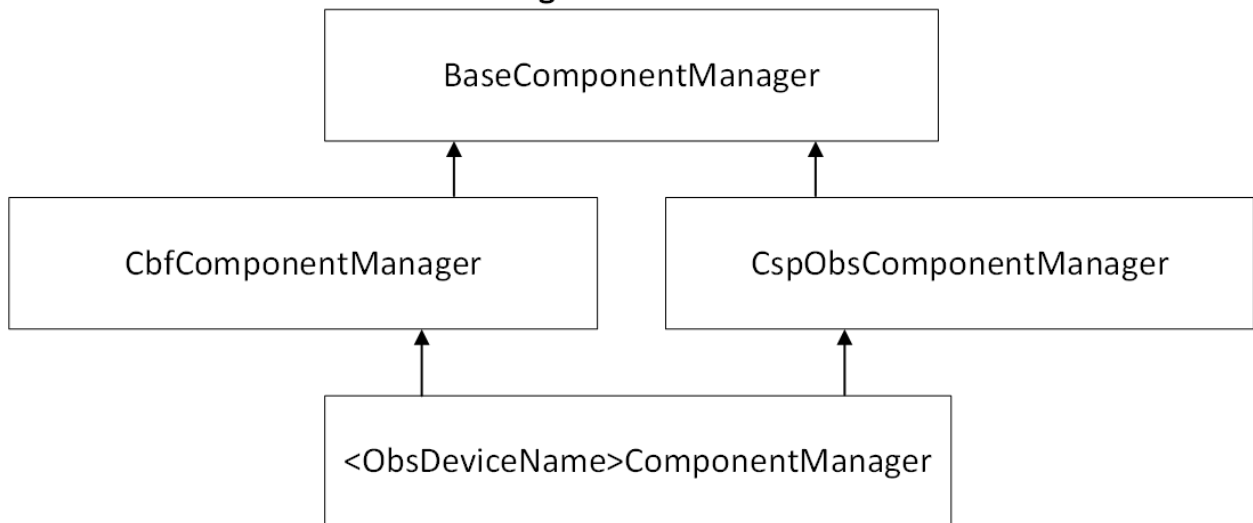

6.2 CbfController

6.2.1 CbfController Class

class ska_mid_cbf_mcs.controller.controller_device.CbfController(*args: Any, **kwargs: Any)

Bases: SKAController

CbfController TANGO device class. Primary point of contact for monitoring and control of Mid.CBF. Implements state and mode indicators, and a set of state transition commands.

init_command_objects() → None

Sets up the command objects

get_num_capabilities() → None

Get number of capabilities for _init_Device. If property not found in db, then assign a default amount(197,27,16)

class InitCommand(*args: Any, **kwargs: Any)

Bases: InitCommand

do() → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for device initialisation. :return: A tuple containing a return code and a string message indicating status. The message is for information purpose only. :return: (ResultCode, str)

always_executed_hook() → None

Hook to be executed before any command.

create_component_manager() → *ControllerComponentManager*

Create and return a component manager for this device.

Returns

a component manager for this device.

delete_device() → None

Unsubscribe to events, turn all the subarrays, VCCs and FSPs off

read_commandProgress() → int

Return commandProgress attribute: percentage progress implemented for commands that result in state/mode transitions for a large number of components and/or are executed in stages (e.g power up, power down)

read_receptorToVcc() → List[str]

Return 'receptorID:vccID'

read_vccToReceptor() → List[str]

Return receptorToVcc attribute: 'vccID:receptorID'

read_subarrayconfigID() → List[str]

Return subarrayconfigID attribute: ID of subarray config. Used for debug purposes. empty string if subarray is not configured for a scan

read_reportVCCState() → List[tango.DevState]

Return reportVCCState attribute: the state of the VCC capabilities as an array of DevState

read_reportVCCHealthState() → List[int]

Return reportVCCHealthState attribute: health status of VCC capabilities as an array of unsigned short. Ex: [0,0,0,2,0...3]

read_reportVCCAdminMode() → List[int]

Return reportVCCAdminMode attribute: report the administration mode of the VCC capabilities as an array of unsigned short. For ex.: [0,0,0,... 1,2]

read_reportVCCSubarrayMembership() → List[int]

Return reportVCCSubarrayMembership attribute: report the subarray membership of VCCs (each can only belong to a single subarray), 0 if not assigned.

read_reportFSPState() → List[tango.DevState]

Return reportFSPState attribute: state of all the FSP capabilities in the form of array

read_reportFSPHealthState() → List[int]

Return reportFspHealthState attribute: Report the health status of the FSP capabilities

read_reportFSPAdminMode() → List[int]

Return reportFSPAdminMode attribute: Report the administration mode of the FSP capabilities as an array of unsigned short. for ex: [0,0,2,..]

read_reportFSPSubarrayMembership() → List[List[int]]

Return reportVCCSubarrayMembership attribute: Report the subarray membership of FSPs (each can only belong to at most 16 subarrays), 0 if not assigned.

read_frequencyOffsetK() → List[int]

Return frequencyOffsetK attribute: array of integers reporting receptors in subarray

write_frequencyOffsetK(value: List[int]) → None

Set frequencyOffsetK attribute

read_frequencyOffsetDeltaF() → List[int]

Return frequencyOffsetDeltaF attribute: Frequency offset (delta f) of all 197 receptors as an array of ints.

write_frequencyOffsetDeltaF(value: List[int]) → None

Set the frequencyOffsetDeltaF attribute

read_reportSubarrayState() → List[tango.DevState]

Return reportSubarrayState attribute: report the state of the Subarray with an array of DevState

read_reportSubarrayHealthState() → List[int]

Return reportSubarrayHealthState attribute: subarray healthstate in an array of unsigned short

read_reportSubarrayAdminMode() → List[int]

Return reportSubarrayAdminMode attribute: Report the administration mode of the Subarray as an array of unsigned short. for ex: [0,0,2,..]

write_simulationMode(value: ska_tango_base.control_model.SimulationMode) → None

Set the Simulation Mode of the device.

Parameters

value – SimulationMode

class OnCommand(*args: Any, **kwargs: Any)

Bases: OnCommand

A class for the CbfController's On() command.

do() → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for On() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class `OffCommand(*args: Any, **kwargs: Any)`

Bases: `OffCommand`

A class for the CbfController's Off() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Off() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class `StandbyCommand(*args: Any, **kwargs: Any)`

Bases: `StandbyCommand`

A class for the CbfController's Standby() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Standby() command functionality. Turn off subarray, vcc, fsp, turn CbfController to standby

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

6.2.2 ControllerComponentManager Class

class `ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager(*args: Any, **kwargs: Any)`

Bases: `CbfComponentManager`

A component manager for the CbfController device.

property `report_vcc_state: List[tango.DevState]`

Get Vcc States

Returns

the state of the VCC capabilities as an array of DevState

property `report_vcc_health_state: List[int]`

Get Vcc Health States

Returns

health status of VCC capabilities as an array of unsigned short

property report_vcc_admin_mode: List[int]

Get Vcc Admin Modes

Returns

report the administration mode of the VCC capabilities as an array of unsigned short

property report_vcc_subarray_membership: List[int]

Get Vcc Subarray Memberships

Returns

report the subarray membership of VCCs (each can only belong to a single subarray), 0 if not assigned

property report_fsp_state: List[tango.DevState]

Get Subarray States

Returns

report the state of the Subarray with an array of DevState

property report_fsp_health_state: List[int]

Get Fsp Health States

Returns

Report the health status of the FSP capabilities

property report_fsp_admin_mode: List[int]

Get Fsp Admin Modes

Returns

Report the administration mode of the FSP capabilities as an array of unsigned short

property report_fsp_subarray_membership: List[int]

Get Fsp Subarray Memberships

Returns

Report the subarray membership of FSPs (each can only belong to at most 16 subarrays), 0 if not assigned.

property report_subarray_state: List[tango.DevState]

Get Fsp States

Returns

state of all the FSP capabilities in the form of array

property report_subarray_health_state: List[int]

Get Subarray Health States

Returns

subarray healthstate in an array of unsigned short

property report_subarray_admin_mode: List[int]

Get Subarray Admin Modes

Returns

Report the administration mode of the Subarray as an array of unsigned short

property report_subarray_config_id: List[str]

Get Subarray Config Id

Returns

ID of subarray config. Used for debug purposes. Empty string if subarray is not configured for a scan.

start_communicating() → `None`

Establish communication with the component, then start monitoring.

stop_communicating() → `None`

Stop communication with the component

on() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Turn on the controller and its subordinate devices

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

off() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Turn off the controller and its subordinate devices

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

standby() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Turn the controller into low power standby mode

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

6.2.3 TalonDxComponentManager Class

The `TalonDxComponentManager` is used to configure and start up Tango device servers on the Talon boards. These actions are performed during the On command of the `CbfController`. Note that these actions are not executed when the `simulationMode` of the `CbfController` is set to 1 (this is the default). Prior to sending the On command to the `CbfController`, the `simulationMode` should be set to 0 if it is desired to test the command with the Talon boards in the loop.

```
class ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager(talondx_config_path:
                                                                    str,
                                                                    simula-
                                                                    tion_mode:
                                                                    ska_tango_base.control_m
                                                                    logger:
                                                                    Logger)
```

Bases: `object`

A component manager for the Talon-DX boards. Used to configure and start the Tango applications on the HPS of each board.

configure_talons() → ska_tango_base.commands.ResultCode

Performs all actions to configure the Talon boards after power on and start the HPS device servers. This includes: copying the device server binaries and FPGA bitstream to the Talon boards, starting the HPS master device server and sending the configure command to each DsHpsMaster.

Returns

ResultCode.FAILED if any operations failed, else ResultCode.OK

_setup_tango_host_file() → None

Copy the hps_master_mcs.sh file from mnt into mnt/talondx-config

Returns

ResultCode.OK if all artifacts were copied successfully, otherwise ResultCode.FAILED

_secure_copy(ssh_client: paramiko.SSHClient, src: str, dest: str) → None

Execute a secure file copy to the specified target address.

Parameters

- **ssh_client** – SSH client for the Talon board we are trying to SCP to
- **src** – Source file path
- **dest** – Destination file path

Raises

SCPException – if the file copy fails

_configure_talon_networking() → ska_tango_base.commands.ResultCode

Configure the networking of the boards including DNS nameserver and ifconfig for default gateway

Returns

ResultCode.OK if all artifacts were copied successfully, otherwise ResultCode.FAILED

_copy_binaries_and_bitstream() → ska_tango_base.commands.ResultCode

Copy the relevant device server binaries and FPGA bitstream to each Talon board.

Returns

ResultCode.OK if all artifacts were copied successfully, otherwise ResultCode.FAILED

_start_hps_master() → ska_tango_base.commands.ResultCode

Start the DsHpsMaster on each Talon board.

Returns

ResultCode.OK if all HPS masters were started successfully, otherwise ResultCode.FAILED

_create_hps_master_device_proxies() → ska_tango_base.commands.ResultCode

Attempt to create a device proxy to each DsHpsMaster device.

Returns

ResultCode.OK if all proxies were created successfully, otherwise ResultCode.FAILED

_configure_hps_master() → ska_tango_base.commands.ResultCode

Send the configure command to all the DsHpsMaster devices.

Returns

ResultCode.OK if all configure commands were sent successfully, otherwise ResultCode.FAILED

6.3 CbfSubarray

6.3.1 CbfSubarray Class

```
class ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray(*args: Any, **kwargs: Any)
```

Bases: CspSubElementSubarray

CBFSubarray TANGO device class for the CBFSubarray prototype

```
init_command_objects() → None
```

Sets up the command objects. Register the new Commands here.

```
class InitCommand(*args: Any, **kwargs: Any)
```

Bases: InitCommand

A class for the CbfSubarray's init_device() "command".

```
do() → Tuple[ska_tango_base.commands.ResultCode, str]
```

Stateless hook for device initialisation. Initialize the attributes and the properties of the CbfSubarray.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

```
create_component_manager() → CbfSubarrayComponentManager
```

Create and return a subarray component manager.

Returns

a subarray component manager

```
always_executed_hook() → None
```

methods always executed before any TANGO command is executed

```
delete_device() → None
```

Hook to delete device.

```
read_frequencyBand() → int
```

Return frequency band assigned to this subarray. One of ["1", "2", "3", "4", "5a", "5b",]

Returns

the frequency band

Return type

int

```
read_receptors() → List[str]
```

Return list of receptors assigned to subarray

Returns

the list of receptors

Return type

List[str]

```
write_receptors(value: List[str]) → None
```

Set receptors of this array to the input value. Input should be an array of int

Parameters

value – the list of receptors

read_vccState() → Dict[str, tango.DevState]

Return the attribute vccState: array of DevState

Returns

the list of VCC states

Return type

Dict[str, DevState]

read_vccHealthState() → Dict[str, ska_tango_base.control_model.HealthState]

returns vccHealthState attribute: an array of unsigned short

Returns

the list of VCC health states

Return type

Dict[str, HealthState]

read_fspState() → Dict[str, tango.DevState]

Return the attribute fspState: array of DevState

Returns

the list of FSP states

Return type

Dict[str, DevState]

read_fspHealthState() → Dict[str, ska_tango_base.control_model.HealthState]

returns fspHealthState attribute: an array of unsigned short

Returns

the list of FSP health states

Return type

Dict[str, HealthState]

read_fspList() → List[List[int]]

return fspList attribute 2 dimensional array the fsp used by all the subarrays

Returns

the array of FSP IDs

Return type

List[List[int]]

read_frequencyOffsetK() → List[int]

Return frequencyOffsetK attribute: array of integers reporting receptors in subarray

write_frequencyOffsetK(value: List[int]) → None

Set frequencyOffsetK attribute

read_frequencyOffsetDeltaF() → int

Return frequencyOffsetDeltaF attribute: Frequency offset (delta f)

write_frequencyOffsetDeltaF(value: int) → None

Set the frequencyOffsetDeltaF attribute

class RemoveReceptorsCommand(*args: Any, **kwargs: Any)

Bases: ReleaseResourcesCommand

A class for CbfSubarray's RemoveReceptors() command. Equivalent to the ReleaseResourcesCommand in ADR-8.

do(argin: List[str]) → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for RemoveReceptors() command functionality.

Parameters

argin – The receptors to be released

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

RemoveReceptors(argin: List[str]) → Tuple[ska_tango_base.commands.ResultCode, str]

Remove from list of receptors. Turn Subarray to ObsState = EMPTY if no receptors assigned. Uses RemoveReceptorsCommand class.

Parameters

argin – list of receptor IDs to remove

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

class RemoveAllReceptorsCommand(*args: Any, **kwargs: Any)

Bases: ReleaseAllResourcesCommand

A class for CbfSubarray's RemoveAllReceptors() command.

do() → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for RemoveAllReceptors() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

class AddReceptorsCommand(*args: Any, **kwargs: Any)

Bases: AssignResourcesCommand

A class for CbfSubarray's AddReceptors() command.

do(argin: List[str]) → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for AddReceptors() command functionality.

Parameters

argin – The receptors to be assigned

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

```
class ConfigureScanCommand(*args: Any, **kwargs: Any)
```

Bases: ConfigureScanCommand

A class for CbfSubarray's ConfigureScan() command.

```
do(argin: str) → Tuple[ska_tango_base.commands.ResultCode, str]
```

Stateless hook for ConfigureScan() command functionality.

Parameters

argin – The configuration as JSON formatted string.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

```
validate_input(argin: str) → Tuple[bool, str]
```

Validate scan configuration.

Parameters

argin – The configuration as JSON formatted string.

Returns

A tuple containing a boolean indicating if the configuration is valid and a string message. The message is for information purpose only.

Return type

(bool, str)

```
class ScanCommand(*args: Any, **kwargs: Any)
```

Bases: ScanCommand

A class for CbfSubarray's Scan() command.

```
do(argin: str) → Tuple[ska_tango_base.commands.ResultCode, str]
```

Stateless hook for Scan() command functionality.

Parameters

argin (str) – The scan ID as JSON formatted string.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

```
class EndScanCommand(*args: Any, **kwargs: Any)
```

Bases: EndScanCommand

A class for CbfSubarray's EndScan() command.

```
do() → Tuple[ska_tango_base.commands.ResultCode, str]
```

Stateless hook for EndScan() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

6.3.2 CbfSubarray Component Class

```
class ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager(*args:  
    Any,  
    **kwargs:  
    Any)
```

Bases: [CbfComponentManager](#), [CspSubarrayComponentManager](#)

A component manager for the CbfSubarray class.

property config_id: [str](#)

Return the configuration ID.

property scan_id: [int](#)

Return the scan ID.

property subarray_id: [int](#)

Return the subarray ID.

property frequency_band: [int](#)

Return the frequency band.

property receptors: [List\[str\]](#)

Return the receptor list.

property vcc_state: [Dict\[str, tango.DevState\]](#)

Return the VCC operational states.

property vcc_health_state: [Dict\[str, ska_tango_base.control_model.HealthState\]](#)

Return the VCC health states.

property fsp_state: [Dict\[str, tango.DevState\]](#)

Return the FSP operational states.

property fsp_health_state: [Dict\[str, ska_tango_base.control_model.HealthState\]](#)

Return the FSP health states.

property fsp_list: [List\[List\[int\]\]](#)

Return the FSP function mode device IDs.

start_communicating() → [None](#)

Establish communication with the component, then start monitoring.

stop_communicating() → [None](#)

Stop communication with the component.

on() → [None](#)

off() → [None](#)

standby() → [None](#)

validate_ip(ip: str) → [bool](#)

Validate IP address format.

Parameters

ip – IP address to be evaluated

Returns

whether or not the IP address format is valid

Return type

`bool`

raise_configure_scan_fatal_error(*msg: str*) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Raise fatal error in ConfigureScan execution

Parameters

msg – error message

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

deconfigure() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Completely deconfigure the subarray; all initialization performed by the ConfigureScan command must be 'undone' here.

validate_input(*argin: str*) → `Tuple[bool, str]`

Validate scan configuration.

Parameters

argin – The configuration as JSON formatted string.

Returns

A tuple containing a boolean indicating if the configuration is valid and a string message. The message is for information purpose only.

Return type

(`bool`, `str`)

configure_scan(*argin: str*) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

remove_receptors(*argin: List[str]*) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Remove receptor from subarray.

Parameters

argin – The receptors to be released

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

remove_all_receptors() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Remove all receptors from subarray.

Parameters

receptor_id – The receptor to be released

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

add_receptors(*argin*: `List[str]`) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Add receptors to subarray.

Parameters

argin – The receptors to be assigned

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

scan(*argin*: `Dict[Any]`) → `Tuple[ResultCode, str]`

Start subarray Scan operation.

Parameters

argin (`str`) – The scan ID as JSON formatted string.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

end_scan() → `Tuple[ska_tango_base.commands.ResultCode, str]`

End subarray Scan operation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

abort() → `None`

Abort subarray configuration or operation.

restart() → `None`

Restart from fault.

obsreset() → `None`

Reset subarray scan configuration or operation.

update_component_resources(*resourced*: `bool`) → `None`

Update the component resource status, calling callbacks as required.

Parameters

resourced – whether the component is resourced.

update_component_configuration(*configured: bool*) → None

Update the component configuration status, calling callbacks as required.

Parameters

configured – whether the component is configured.

calculate_fs_sample_rate(*freq_band: str, receptor: str*) → Dict

calculate_fs_sample_rates(*freq_band: str*) → List[Dict]

6.4 Fsp

6.4.1 Fsp Class

class `ska_mid_cbf_mcs.fsp.fsp_device.Fsp(*args: Any, **kwargs: Any)`

Bases: SKACapability

Fsp TANGO device class for the prototype

init_command_objects() → None

Sets up the command objects

always_executed_hook() → None

Hook to be executed before any commands.

create_component_manager() → *FspComponentManager*

Create and return a component manager for this device.

Returns

a component manager for this device.

delete_device() → None

Hook to delete device.

write_simulationMode(*value: ska_tango_base.control_model.SimulationMode*) → None

Set the simulation mode of the device.

Parameters

value – SimulationMode

read_functionMode() → tango.DevEnum

Read the functionMode attribute.

Returns

a DevEnum representing the mode.

Return type

tango.DevEnum

read_subarrayMembership() → List[int]

Read the subarrayMembership attribute.

Returns

an array of affiliations of the FSP.

Return type

List[int]

read_scanID() → *int*

Read the scanID attribute.

Returns

the scanID attribute.

Return type

int

read_configID() → *str*

Read the configID attribute.

Returns

the configID attribute.

Return type

str

write_configID(value: *str*) → *None*

Write the configID attribute.

Parameters

value – the configID value.

read_jonesMatrix() → *str*

Read the jonesMatrix attribute.

Returns

the jonesMatrix attribute.

Return type

string

read_delayModel() → *str*

Read the delayModel attribute.

Returns

the delayModel attribute.

Return type

string

read_timingBeamWeights() → *str*

Read the timingBeamWeights attribute.

Returns

the timingBeamWeights attribute.

Return type

string

class InitCommand(*args: *Any*, **kwargs: *Any*)

Bases: `InitCommand`

A class for the Fsp’s `init_device()` “command”.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

class OnCommand(*args: [Any](#), **kwargs: [Any](#))

Bases: [OnCommand](#)

A class for the Fsp's On() command.

do() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for On() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

class OffCommand(*args: [Any](#), **kwargs: [Any](#))

Bases: [OffCommand](#)

A class for the Fsp's Off() command.

do() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for Off() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

class StandbyCommand(*args: [Any](#), **kwargs: [Any](#))

Bases: [StandbyCommand](#)

A class for the Fsp's Standby() command.

do() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for Standby() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

class SetFunctionModeCommand(*args: [Any](#), **kwargs: [Any](#))

Bases: [ResponseCommand](#)

A class for the Fsp's SetFunctionMode() command.

do(*argin*: [str](#)) → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for SetFunctionMode() command functionality.

Parameters

argin – one of 'IDLE', 'CORR', 'PSS-BF', 'PST-BF', or 'VLBI'

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

SetFunctionMode(*argin: str*) → *None*

Set the Fsp Function Mode, either IDLE, CORR, PSS-BF, PST-BF, or VLBI. If IDLE set the pss, pst, corr and vlbi devices to DISABLE. Otherwise, turn one of them ON according to *argin*, and all others DISABLE.

Parameters

argin – one of 'IDLE', 'CORR', 'PSS-BF', 'PST-BF', or 'VLBI'

is_SetFunctionMode_allowed() → *bool*

Determine if SetFunctionMode is allowed (allowed if FSP state is ON).

Returns

if SetFunctionMode is allowed

Return type

bool

class AddSubarrayMembershipCommand(*args: *Any*, **kwargs: *Any*)

Bases: ResponseCommand

A class for the Fsp's AddSubarrayMembership() command.

do(*argin: int*) → *Tuple*[ska_tango_base.commands.ResultCode, *str*]

Stateless hook for AddSubarrayMembership() command functionality.

Parameters

argin – an integer representing the subarray affiliation

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(*ResultCode*, *str*)

AddSubarrayMembership(*argin: str*) → *None*

Add a subarray to the subarrayMembership list.

Parameters

argin – an integer representing the subarray affiliation

is_AddSubarrayMembership_allowed() → *bool*

Determine if AddSubarrayMembership is allowed (allowed if FSP state is ON).

Returns

if AddSubarrayMembership is allowed

Return type

bool

class RemoveSubarrayMembershipCommand(*args: *Any*, **kwargs: *Any*)

Bases: ResponseCommand

A class for the Fsp's RemoveSubarrayMembership() command.

do(*argin: int*) → *Tuple*[ska_tango_base.commands.ResultCode, *str*]

Stateless hook for RemoveSubarrayMembership() command functionality.

Parameters

argin – an integer representing the subarray affiliation

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

RemoveSubarrayMembership(*argin*: `str`) → `None`

Remove subarray from the subarrayMembership list. If subarrayMembership is empty after removing (no subarray is using this FSP), set function mode to empty.

Parameters

argin – an integer representing the subarray affiliation

is_RemoveSubarrayMembership_allowed() → `bool`

Determine if RemoveSubarrayMembership is allowed (allowed if FSP state is ON).

Returns

if RemoveSubarrayMembership is allowed

Return type

`bool`

getConfigID() → `str`

Get the configID for all the fspCorrSubarray

Returns

the configID

Return type

`str`

class UpdateJonesMatrixCommand(*args: *Any*, **kwargs: *Any*)

Bases: `ResponseCommand`

A class for the Fsp's UpdateJonesMatrix() command.

do(*argin*: `str`) → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Stateless hook for UpdateJonesMatrix() command functionality.

Parameters

argin – the jones matrix data

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

UpdateJonesMatrix(*argin*: `str`) → `None`

Update the FSP's jones matrix (serialized JSON object)

Parameters

argin – the jones matrix data

is_UpdateJonesMatrix_allowed() → `bool`

Determine if UpdateJonesMatrix is allowed (allowed if FSP state is ON and ObsState is READY OR SCANNING).

Returns

if UpdateJonesMatrix is allowed

Return type

`bool`

class UpdateDelayModelCommand(*args: Any, **kwargs: Any)

Bases: ResponseCommand

A class for the Fsp's UpdateDelayModel() command.

do(argin: str) → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for UpdateDelayModel() command functionality.

Parameters

argin – the delay model data

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

UpdateDelayModel(argin: str) → None

Update the FSP's delay model (serialized JSON object)

Parameters

argin – the delay model data

is_UpdateDelayModel_allowed() → bool

Determine if UpdateDelayModel is allowed (allowed if FSP state is ON and ObsState is READY OR SCANNING).

Returns

if UpdateDelayModel is allowed

Return type

bool

class UpdateTimingBeamWeightsCommand(*args: Any, **kwargs: Any)

Bases: ResponseCommand

A class for the Fsp's UpdateTimingBeamWeights() command.

do(argin: str) → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for UpdateTimingBeamWeights() command functionality.

Parameters

argin – the timing beam weight data

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

UpdateTimingBeamWeights(argin: str) → None

Update the FSP's timing beam weights (serialized JSON object)

Parameters

argin – the timing beam weight data

is_UpdateTimingBeamWeights_allowed() → bool

Determine if UpdateTimingBeamWeights is allowed (allowed if FSP state is ON and ObsState is READY OR SCANNING).

Returns

if UpdateTimingBeamWeights is allowed

Return type

`bool`

6.4.2 FspComponentManager Class

class `ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager`(*args: *Any*, **kwargs: *Any*)

Bases: *CbfComponentManager*

A component manager for the Fsp device.

property `subarray_membership`: `List[int]`

Subarray Membership

Returns

an array of affiliations of the FSP.

Return type

`List[int]`

property `function_mode`: `tango.DevEnum`

Function Mode

Returns

the Fsp function mode

Return type

`tango.DevEnum`

property `jones_matrix`: `str`

Jones Matrix

Returns

the jones matrix

Return type

`str`

property `delay_model`: `str`

Delay Model

Returns

the delay model

Return type

`str`

property `timing_beam_weights`: `str`

Timing Beam Weights

Returns

the timing beam weights

Return type

`str`

property `simulation_mode`: `ska_tango_base.control_model.SimulationMode`

Get the simulation mode of the component manager.

Returns

simulation mode of the component manager

start_communicating() → `None`

Establish communication with the component, then start monitoring.

stop_communicating() → `None`

Stop communication with the component

remove_subarray_membership(*argin: int*) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Remove subarray from the subarrayMembership list. If subarrayMembership is empty after removing (no subarray is using this FSP), set function mode to empty.

Parameters

argin – an integer representing the subarray affiliation

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

add_subarray_membership(*argin: int*) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Add a subarray to the subarrayMembership list.

Parameters

argin – an integer representing the subarray affiliation

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

on() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Turn on the fsp and its subordinate devices

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

off() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Turn off the fsp and its subordinate devices

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

standby() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Put the fsp into low power standby mode

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

set_function_mode(*argin: str*) → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Put the fsp into low power standby mode

Parameters

argin – one of ‘IDLE’, ‘CORR’, ‘PSS-BF’, ‘PST-BF’, or ‘VLBI’

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

update_jones_matrix(*argin: str*) → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Update the FSP’s jones matrix (serialized JSON object)

Parameters

argin – the jones matrix data

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

update_delay_model(*argin: str*) → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Update the FSP’s delay model (serialized JSON object)

Parameters

argin – the delay model data

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

update_timing_beam_weights(*argin: str*) → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Update the FSP’s timing beam weights (serialized JSON object)

Parameters

argin – the timing beam weight data

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

get_fsp_corr_config_id() → `str`

Get the configID for all the fspCorrSubarray

Returns

the configID

Return type

`str`

6.4.3 FspCorrSubarray Class

class ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray(*args: Any, **kwargs: Any)

Bases: CspSubElementObsDevice

FspCorrSubarray TANGO device class for the FspCorrSubarray prototype

init_command_objects() → None

Sets up the command objects

class InitCommand(*args: Any, **kwargs: Any)

Bases: InitCommand

A class for the FspCorrSubarray's init_device() "command".

do() → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

always_executed_hook() → None

Hook to be executed before any commands.

create_component_manager() → *FspCorrSubarrayComponentManager*

Create and return a component manager for this device.

Returns

a component manager for this device.

delete_device() → None

Hook to delete device.

read_receptors() → List[int]

Read the receptors attribute.

Returns

the list of receptors

Return type

List[int]

read_frequencyBand() → tango.DevEnum

Read the frequencyBand attribute.

Returns

the frequency band

Return type

tango.DevEnum

read_band5Tuning() → List[float]

Read the band5Tuning attribute.

Returns

the band5Tuning attribute (array of float, first element corresponds to the first stream, second to the second stream).

Return type

List[float]

read_frequencyBandOffsetStream1() → int

Read the frequencyBandOffsetStream1 attribute.

Returns

the frequencyBandOffsetStream1 attribute

Return type

int

read_frequencyBandOffsetStream2() → int

Read the frequencyBandOffsetStream2 attribute.

Returns

the frequencyBandOffsetStream2 attribute.

Return type

int

read_frequencySliceID() → int

Read the frequencySliceID attribute.

Returns

the frequencySliceID attribute.

Return type

int

read_corrBandwidth() → int

Read the corrBandwidth attribute.

Returns

the corrBandwidth attribute (bandwidth to be correlated is <Full Bandwidth>/2^bandwidth).

Return type

int

read_zoomWindowTuning() → int

Read the zoomWindowTuning attribute.

Returns

the zoomWindowTuning attribute

Return type

int

read_integrationFactor() → int

Read the integrationFactor attribute.

Returns

the integrationFactor attribute (millisecond).

Return type

int

read_channelAveragingMap() → List[List[int]]

Read the channelAveragingMap attribute.

Returns

the channelAveragingMap attribute. Consists of 2*20 array of integers(20 tuples representing 20* 744 channels). The first element is the ID of the first channel in a channel group. The second element is the averaging factor

Return type

List[List[int]]

read_visDestinationAddress() → str

Read the visDestinationAddress attribute.

Returns

the visDestinationAddress attribute. (JSON object containing info about current SDP destination addresses being used).

Return type

str

write_visDestinationAddress(value: str) → None

Write the visDestinationAddress attribute.

Parameters

value – the visDestinationAddress attribute value. (JSON object containing info about current SDP destination addresses being used).

read_fspChannelOffset() → int

Read the fspChannelOffset attribute.

Returns

the fspChannelOffset attribute.

Return type

int

write_fspChannelOffset(value: int) → None

Write the fspChannelOffset attribute.

Parameters

value – the fspChannelOffset attribute value.

read_outputLinkMap() → List[List[int]]

Read the outputLinkMap attribute.

Returns

the outputLinkMap attribute.

Return type

List[List[int]]

write_outputLinkMap(value: List[List[int]]) → None

Write the outputLinkMap attribute.

Parameters

value – the outputLinkMap attribute value.

read_scanID() → int

Read the scanID attribute.

Returns

the scanID attribute.

Return type

`int`

write_scanID(*value: int*) → `None`

Write the scanID attribute.

Parameters

value – the scanID attribute value.

read_configID() → `str`

Read the configID attribute.

Returns

the configID attribute.

Return type

`str`

write_configID(*value: str*) → `None`

Write the configID attribute.

Parameters

value – the configID attribute value.

write_simulationMode(*value: ska_tango_base.control_model.SimulationMode*) → `None`

Set the simulation mode of the device.

Parameters

value – SimulationMode

class OnCommand(*args: *Any*, **kwargs: *Any*)

Bases: `OnCommand`

A class for the FspCorrSubarray's On() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for On() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class OffCommand(*args: *Any*, **kwargs: *Any*)

Bases: `OffCommand`

A class for the FspCorrSubarray's Off() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Off() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class StandbyCommand(*args: *Any*, **kwargs: *Any*)

Bases: `StandbyCommand`

A class for the FspCorrSubarray's Standby() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Standby() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class ConfigureScanCommand(*args: *Any*, **kwargs: *Any*)

Bases: `ConfigureScanCommand`

A class for the FspCorrSubarray's ConfigureScan() command.

do(*argin*: `str`) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for ConfigureScan() command functionality.

Parameters

argin (`str`) – The configuration as JSON formatted string

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

Raises

`CommandError` if the configuration data validation fails.

validate_input(*argin*: `str`) → `Tuple[bool, str]`

Validate the configuration parameters against allowed values, as needed.

Parameters

argin – The JSON formatted string with configuration for the device. :type argin: 'DevString'

Returns

A tuple containing a boolean and a string message.

Return type

(`bool`, `str`)

class ScanCommand(*args: *Any*, **kwargs: *Any*)

Bases: `ScanCommand`

A class for the FspCorrSubarray's Scan() command.

do(*argin*: `str`) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Scan() command functionality.

Parameters

argin (`str`) – The scan ID

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

Raises

`CommandError` if the configuration data validation fails.

class EndScanCommand(*args: *Any*, **kwargs: *Any*)

Bases: `EndScanCommand`

A class for the FspCorrSubarray's Scan() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Scan() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

Raises

`CommandError` if the configuration data validation fails.

class GoToIdleCommand(*args: *Any*, **kwargs: *Any*)

Bases: `GoToIdleCommand`

A class for the FspCorrSubarray's GoToIdle command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for GoToIdle() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

is_getLinkAndAddress_allowed() → `bool`

Determine if getLinkAndAddress is allowed (allowed if destination addresses are received, meaning outputLinkMap also received (checked in subarray validate scan)).

Returns

if getLinkAndAddress is allowed

Return type

`bool`

getLinkAndAddress(*argin: int*) → `str`

Get output link and destination addresses in JSON based on a channel ID.

Parameters

argin – the channel id.

Returns

the output link and destination addresses in JSON.

Return type

`str`

6.4.4 FspCorrSubarrayComponentManager Class

class `ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager`(*args: *Any*, **kwargs: *Any*)

Bases: `CbfComponentManager`, `CspObsComponentManager`

A component manager for the FspCorrSubarray device.

property frequency_band: `tango.DevEnum`

Frequency Band

Returns

the frequency band

Return type

tango.DevEnum

property stream_tuning: `List[float]`

Band 5 Tuning

Returns

an array of float, (first element corresponds to the first stream, second to the second stream).

Return type

`List[float]`

property frequency_band_offset_stream_1: `int`

Frequency Band Offset Stream 1

Returns

the frequency band offset for stream 1

Return type

`int`

property frequency_band_offset_stream_2: `int`

Frequency Band Offset Stream 2

Returns

the frequency band offset for stream 2

Return type

`int`

property frequency_slice_id: `int`

Frequency Slice ID

Returns

the frequency slice id

Return type

`int`

property bandwidth: `int`

Bandwidth

Returns

the corr bandwidth (bandwidth to be correlated is $\text{Full Bandwidth} / 2^{\text{bandwidth}}$).

Return type

`int`

property integration_factor: `int`

Integration Factor

Returns

the integration factor

Return type

`int`

property fsp_channel_offset: `int`

FSP Channel Offset

Returns

the FSP channel offset

Return type

`int`

property vis_destination_address: `str`

VIS Destination Address

Returns

JSON string containing info about current SDP destination addresses being used

Return type

`str`

property output_link_map: `List[List[int]]`

Output Link Map

Returns

the output link map

Return type

`List[List[int]]`

property channel_averaging_map: `List[List[int]]`

Channel Averaging Map

Returns

the channel averaging map. Consists of 2*20 array of integers(20 tuples representing 20*744 channels). The first element is the ID of the first channel in a channel group. The second element is the averaging factor

Return type

`List[List[int]]`

property zoom_window_tuning: `int`

Zoom Window Tuning

Returns

the zoom window tuning

Return type

`int`

property config_id: `str`

Config ID

Returns

the config id

Return type

`str`

property scan_id: `int`

Scan ID

Returns

the scan id

Return type

`int`

property receptors: `List[int]`

Receptors

Returns

list of receptor ids

Return type

`List[int]`

property simulation_mode: `ska_tango_base.control_model.SimulationMode`

Get the simulation mode of the component manager.

Returns

simulation mode of the component manager

start_communicating() `→ None`

Establish communication with the component, then start monitoring.

stop_communicating() `→ None`

Stop communication with the component

configure_scan(configuration: str) `→ Tuple[ska_tango_base.commands.ResultCode, str]`

Performs the ConfigureScan() command functionality

Parameters

configuration – The configuration as JSON formatted string

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

`(ResultCode, str)`

scan(scan_id: int) `→ Tuple[ska_tango_base.commands.ResultCode, str]`

Performs the Scan() command functionality

Parameters

scan_id – The scan id

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

`(ResultCode, str)`

end_scan() `→ Tuple[ska_tango_base.commands.ResultCode, str]`

Performs the EndScan() command functionality

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

`(ResultCode, str)`

go_to_idle() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Performs the GoToIdle() command functionality

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

6.4.5 FspPssSubarray Class

class `ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray(*args: Any, **kwargs: Any)`

Bases: `CspSubElementObsDevice`

FspPssSubarray TANGO device class for the FspPssSubarray prototype

init_command_objects() → `None`

Sets up the command objects

class `InitCommand(*args: Any, **kwargs: Any)`

Bases: `InitCommand`

A class for the FspPssSubarray's init_device() "command".

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

always_executed_hook() → `None`

Hook to be executed before any commands.

create_component_manager() → `FspPssSubarrayComponentManager`

Create and return a component manager for this device.

Returns

a component manager for this device.

delete_device() → `None`

Hook to delete device.

read_receptors() → `List[int]`

Read the receptors attribute.

Returns

the receptors attribute.

Return type

`List[int]`

read_searchBeams() → `List[str]`

Read the searchBeams attribute.

Returns

the searchBeams attribute.

Return type

List[str]

read_searchBeamID() → List[int]

Read the searchBeamID attribute.

Returns

the searchBeamID attribute.

Return type

List[int]

read_searchWindowID() → List[int]

Read the searchWindowID attribute.

Returns

the searchWindowID attribute.

Return type

List[int]

read_outputEnable() → bool

Read the outputEnable attribute. Used to enable/disable transmission of the output products.

Returns

the outputEnable attribute.

Return type

bool

read_scanID() → int

Read the scanID attribute.

Returns

the scanID attribute.

Return type

int

write_scanID(value: int) → None

Write the scanID attribute.

Parameters

value – the scanID attribute value.

read_configID() → str

Read the configID attribute.

Returns

the configID attribute.

Return type

str

write_configID(value: str) → None

Write the configID attribute.

Parameters

value – the configID attribute value.

```
class OnCommand(*args: Any, **kwargs: Any)
    Bases: OnCommand
    A class for the FspPssSubarray's On() command.
    do() → Tuple[skatango_base.commands.ResultCode, str]
        Stateless hook for On() command functionality.
        Returns
            A tuple containing a return code and a string message indicating status. The message is for
            information purpose only.
        Return type
            (ResultCode, str)

class OffCommand(*args: Any, **kwargs: Any)
    Bases: OffCommand
    A class for the FspPssSubarray's Off() command.
    do() → Tuple[skatango_base.commands.ResultCode, str]
        Stateless hook for Off() command functionality.
        Returns
            A tuple containing a return code and a string message indicating status. The message is for
            information purpose only.
        Return type
            (ResultCode, str)

class StandbyCommand(*args: Any, **kwargs: Any)
    Bases: StandbyCommand
    A class for the FspPssSubarray's Standby() command.
    do() → Tuple[skatango_base.commands.ResultCode, str]
        Stateless hook for Standby() command functionality.
        Returns
            A tuple containing a return code and a string message indicating status. The message is for
            information purpose only.
        Return type
            (ResultCode, str)

class ConfigureScanCommand(*args: Any, **kwargs: Any)
    Bases: ConfigureScanCommand
    A class for the FspPssSubarray's ConfigureScan() command.
    do(argin: str) → Tuple[skatango_base.commands.ResultCode, str]
        Stateless hook for ConfigureScan() command functionality.
        Parameters
            argin (str) – The configuration as JSON formatted string.
        Returns
            A tuple containing a return code and a string message indicating status. The message is for
            information purpose only.
        Return type
            (ResultCode, str)
        Raises
            CommandError if the configuration data validation fails.
    validate_input(argin: str) → Tuple[bool, str]
        Validate the configuration parameters against allowed values, as needed.
```

Parameters

argin – The JSON formatted string with configuration for the device. :type argin: ‘DevString’

Returns

A tuple containing a boolean and a string message.

Return type

(bool, str)

class ScanCommand(*args: Any, **kwargs: Any)

Bases: ScanCommand

A class for the FspPssSubarray’s Scan() command.

do(argin: str) → Tuple[skatango_base.commands.ResultCode, str]

Stateless hook for Scan() command functionality.

Parameters

argin (str) – The scan ID

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

Raises

CommandError if the configuration data validation fails.

class EndScanCommand(*args: Any, **kwargs: Any)

Bases: EndScanCommand

A class for the FspPssSubarray’s Scan() command.

do() → Tuple[skatango_base.commands.ResultCode, str]

Stateless hook for Scan() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

Raises

CommandError if the configuration data validation fails.

class GoToIdleCommand(*args: Any, **kwargs: Any)

Bases: GoToIdleCommand

A class for the FspPssSubarray’s GoToIdle command.

do() → Tuple[skatango_base.commands.ResultCode, str]

Stateless hook for GoToIdle() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

6.4.6 FspPssSubarrayComponentManager Class

```
class ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.FspPssSubarrayComponentManager(*args:
Any,
**kwargs:
Any)
```

Bases: [CbfComponentManager](#), [CspObsComponentManager](#)

A component manager for the FspPssSubarray device.

property scan_id: [int](#)

Scan ID

Returns
the scan id

Return type
[int](#)

property config_id: [str](#)

Config ID

Returns
the config id

Return type
[str](#)

property fsp_id: [int](#)

Fsp ID

Returns
the fsp id

Return type
[int](#)

property search_window_id: [int](#)

Search Window ID

Returns
the search window id

Return type
[int](#)

property search_beams: [List\[str\]](#)

Search Beams

Returns
search beams

Return type
[List\[str\]](#)

property search_beam_id: [List\[int\]](#)

Search Beam ID

Returns
search beam id

Return type

List[int]

property output_enable: bool

Output Enable

Returns

output enable

Return type

bool

property receptors: List[int]

Receptors

Returns

list of receptor ids

Return type

List[int]

start_communicating() → None

Establish communication with the component, then start monitoring.

stop_communicating() → None

Stop communication with the component

configure_scan(configuration: str) → Tuple[ska_tango_base.commands.ResultCode, str]

Performs the ConfigureScan() command functionality

Parameters

configuration – The configuration as JSON formatted string

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

scan(scan_id: int) → Tuple[ska_tango_base.commands.ResultCode, str]

Performs the Scan() command functionality

Parameters

scan_id – The scan id

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

end_scan() → Tuple[ska_tango_base.commands.ResultCode, str]

Performs the EndScan() command functionality

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

go_to_idle() → `Tuple[skatango_base.commands.ResultCode, str]`

Performs the GoToIdle() command functionality

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

6.4.7 FspPstSubarray Class

class `skatango_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray(*args: Any, **kwargs: Any)`

Bases: `CspSubElementObsDevice`

FspPstSubarray TANGO device class for the FspPstSubarray prototype

init_command_objects() → `None`

Sets up the command objects

class `InitCommand(*args: Any, **kwargs: Any)`

Bases: `InitCommand`

A class for the FspPstSubarray's init_device() "command".

do() → `Tuple[skatango_base.commands.ResultCode, str]`

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

always_executed_hook() → `None`

Hook to be executed before any commands.

create_component_manager() → *FspPstSubarrayComponentManager*

Create and return a component manager for this device.

Returns

a component manager for this device.

delete_device() → `None`

Hook to delete device.

read_outputEnable() → `bool`

Read the outputEnable attribute. Used to enable/disable transmission of the output products.

Returns

the outputEnable attribute.

Return type

`bool`

read_receptors() → `List[int]`

Read the receptors attribute.

Returns

the list of receptors.

Return type

List[int]

write_receptors(value: List[int]) → None

Write the receptors attribute.

Parameters

value – the receptors attribute value.

read_timingBeams() → List[str]

Read the timingBeams attribute.

Returns

the timingBeams attribute.

Return type

List[int]

read_timingBeamID() → List[int]

Read the list of Timing Beam IDs.

Returns

the timingBeamID attribute.

Return type

List[int]

read_scanID() → int

Read the scanID attribute.

Returns

the scanID attribute.

Return type

int

write_scanID(value: int) → None

Write the scanID attribute.

Parameters

value – the scanID attribute value.

class OnCommand(*args: Any, **kwargs: Any)

Bases: OnCommand

A class for the FspPstSubarray's On() command.

do() → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for On() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

class OffCommand(*args: Any, **kwargs: Any)

Bases: OffCommand

A class for the FspPstSubarray's Off() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Off() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class StandbyCommand(*args: *Any*, **kwargs: *Any*)

Bases: `StandbyCommand`

A class for the FspPstSubarray's Standby() command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Standby() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class ConfigureScanCommand(*args: *Any*, **kwargs: *Any*)

Bases: `ConfigureScanCommand`

A class for the FspPstSubarray's ConfigureScan() command.

do(*argin*: `str`) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for ConfigureScan() command functionality.

Parameters

argin (`str`) – The configuration as JSON formatted string

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

Raises

`CommandError` if the configuration data validation fails.

validate_input(*argin*: `str`) → `Tuple[bool, str]`

Validate the configuration parameters against allowed values, as needed.

Parameters

argin – The JSON formatted string with configuration for the device. :type argin: 'DevString'

Returns

A tuple containing a boolean and a string message.

Return type

(`bool`, `str`)

class ScanCommand(*args: *Any*, **kwargs: *Any*)

Bases: `ScanCommand`

A class for the FspPstSubarray's Scan() command.

do(*argin*: `str`) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for Scan() command functionality.

Parameters

argin (`str`) – The scan ID

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

Raises

`CommandError` if the configuration data validation fails.

class `EndScanCommand(*args: Any, **kwargs: Any)`

Bases: `EndScanCommand`

A class for the `FspPstSubarray`'s `EndScan()` command.

do() → `Tuple[skatango_base.commands.ResultCode, str]`

Stateless hook for `Scan()` command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

Raises

`CommandError` if the configuration data validation fails.

class `GoToIdleCommand(*args: Any, **kwargs: Any)`

Bases: `GoToIdleCommand`

A class for the `FspPstSubarray`'s `GoToIdle` command.

do() → `Tuple[skatango_base.commands.ResultCode, str]`

Stateless hook for `GoToIdle()` command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

6.4.8 FspPstSubarrayComponentManager Class

class `skatango_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager(*args: Any, **kwargs: Any)`

Bases: `CbfComponentManager`, `CspObsComponentManager`

A component manager for the `FspPstSubarray` device.

property `fsp_id`: `int`

Fsp ID

Returns

the fsp id

Return type

`int`

property timing_beams: `List[str]`

Timing Beams

Returns

the timing beams

Return type

`List[str]`

property timing_beam_id: `List[int]`

Timing Beam ID

Returns

list of timing beam ids

Return type

`List[int]`

property receptors: `List[int]`

Receptors

Returns

list of receptor ids

Return type

`List[int]`

property scan_id: `int`

Scan ID

Returns

the scan id

Return type

`int`

property output_enable: `bool`

Output Enable

Returns

output enable

Return type

`bool`

start_communicating() \rightarrow `None`

Establish communication with the component, then start monitoring.

stop_communicating() \rightarrow `None`

Stop communication with the component

configure_scan(configuration: str) \rightarrow `Tuple[ska_tango_base.commands.ResultCode, str]`

Performs the ConfigureScan() command functionality

Parameters

configuration – The configuration as JSON formatted string

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

scan(*scan_id*: `int`) → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Performs the Scan() command functionality

Parameters

scan_id – The scan id

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

end_scan() → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Performs the EndScan() command functionality

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

go_to_idle() → `Tuple`[`ska_tango_base.commands.ResultCode`, `str`]

Performs the GoToIdle() command functionality

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

6.5 Vcc

6.5.1 VCC Class

class `ska_mid_cbf_mcs.vcc.vcc_device.Vcc`(*args: *Any*, **kwargs: *Any*)

Bases: `CspSubElementObsDevice`

Vcc TANGO device class for the prototype

init_command_objects() → `None`

Sets up the command objects

create_component_manager() → *VccComponentManager*

always_executed_hook() → `None`

Hook to be executed before any commands.

delete_device() → `None`

Hook to delete device.

write_simulationMode(*value: ska_tango_base.control_model.SimulationMode*) → *None*

Set the simulation mode of the device.

Parameters

value – SimulationMode

read_receptorID() → *int*

Read the receptorID attribute.

Returns

the Vcc's receptor id.

Return type

int

write_receptorID(*value: int*) → *None*

Write the receptorID attribute.

Parameters

value – the receptorID value.

read_subarrayMembership() → *int*

Read the subarrayMembership attribute.

Returns

the subarray membership (0 = no affiliation).

Return type

int

write_subarrayMembership(*value: int*) → *None*

Write the subarrayMembership attribute.

Parameters

value – the subarray membership value (0 = no affiliation).

read_frequencyOffsetK() → *int*

Read the frequencyOffsetK attribute.

Returns

the frequency offset k-value

Return type

int

write_frequencyOffsetK(*value: int*) → *None*

Write the frequencyOffsetK attribute.

Parameters

value – the frequency offset k-value

read_frequencyOffsetDeltaF() → *int*

Read the frequencyOffsetDeltaF attribute.

Returns

the frequency offset delta-f value

Return type

int

write_frequencyOffsetDeltaF(*value: int*) → None

Write the frequencyOffsetDeltaF attribute.

Parameters

value – the frequency offset delta-f value

read_frequencyBand() → tango.DevEnum

Read the frequencyBand attribute.

Returns

the frequency band (being observed by the current scan, one of ["1", "2", "3", "4", "5a", "5b"]).

Return type

tango.DevEnum

read_band5Tuning() → List[float]

Read the band5Tuning attribute.

Returns

the band5Tuning attribute (stream tuning (GHz)).

Return type

list of float

read_frequencyBandOffsetStream1() → int

Read the frequencyBandOffsetStream1 attribute.

Returns

the frequencyBandOffsetStream1 attribute.

Return type

int

read_frequencyBandOffsetStream2() → int

Read the frequencyBandOffsetStream2 attribute.

Returns

the frequencyBandOffsetStream2 attribute.

Return type

int

read_dopplerPhaseCorrection() → List[float]

Read the dopplerPhaseCorrection attribute.

Returns

the dopplerPhaseCorrection attribute.

Return type

list of float

write_dopplerPhaseCorrection(*value: List[float]*) → None

Write the dopplerPhaseCorrection attribute.

Parameters

value – the dopplerPhaseCorrection attribute value.

read_rfiFlaggingMask() → str

Read the rfiFlaggingMask attribute.

Returns

the rfiFlaggingMask attribute.

Return type

str/JSON

read_delayModel() → str

Read the delayModel attribute.

Returns

the delayModel attribute (delay model coefficients, :return: the delayModel attribute (delay model coefficients,

Returns

the delayModel attribute (delay model coefficients, given per frequency slice).

Return type

list of list of float

read_jonesMatrix() → str

Read the jonesMatrix attribute.

Returns

the jonesMatrix attribute (jones matrix values, given per frequency slice).

Return type

str

read_scanID() → int

Read the scanID attribute.

Returns

the scanID attribute.

Return type

int

read_configID() → str

Read the configID attribute.

Returns

the configID attribute.

Return type

str

class InitCommand(*args: Any, **kwargs: Any)

Bases: InitCommand

A class for the Vcc's init_device() "command".

do() → Tuple[ska_tango_base.commands.ResultCode, str]

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

class OnCommand(*args: *Any*, **kwargs: *Any*)

Bases: OnCommand

A class for the Vcc's on command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class OffCommand(*args: *Any*, **kwargs: *Any*)

Bases: OffCommand

A class for the Vcc's off command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class StandbyCommand(*args: *Any*, **kwargs: *Any*)

Bases: StandbyCommand

A class for the Vcc's standby command.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

class ConfigureBandCommand(*args: *Any*, **kwargs: *Any*)

Bases: ResponseCommand

A class for the Vcc's ConfigureBand() command.

Turn on the corresponding band device and disable all the others.

do(*argin: str*) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for ConfigureBand() command functionality.

Parameters

freq_band_name – the frequency band name

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)


```
class ConfigureScanCommand(*args: Any, **kwargs: Any)
```

Bases: ConfigureScanCommand

A class for the Vcc's ConfigureScan() command.

```
do(argin: str) → Tuple[ska_tango_base.commands.ResultCode, str]
```

Stateless hook for ConfigureScan() command functionality.

Parameters

argin (str) – The configuration as JSON formatted string

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

Raises

CommandError if the configuration data validation fails.

```
validate_input(argin: str) → Tuple[bool, str]
```

Validate the configuration parameters against allowed values, as needed.

Parameters

argin – The JSON formatted string with configuration for the device. :type argin: 'DevString'

Returns

A tuple containing a boolean and a string message.

Return type

(bool, str)

```
class ScanCommand(*args: Any, **kwargs: Any)
```

Bases: ScanCommand

A class for the Vcc's Scan() command.

```
do(argin: str) → Tuple[ska_tango_base.commands.ResultCode, str]
```

Stateless hook for Scan() command functionality.

Parameters

argin (str) – The scan ID as JSON formatted string

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

```
class EndScanCommand(*args: Any, **kwargs: Any)
```

Bases: EndScanCommand

A class for the Vcc's EndScan() command.

```
do() → Tuple[ska_tango_base.commands.ResultCode, str]
```

Stateless hook for EndScan() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, str)

```
class ObsResetCommand(*args: Any, **kwargs: Any)
```

Bases: ObsResetCommand

A class for the VCC's ObsReset command.

do()

Stateless hook for ObsReset() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

class AbortCommand(*args: Any, **kwargs: Any)

Bases: [AbortCommand](#)

A class for the VCC's Abort command.

do()

Stateless hook for Abort() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

class GoToIdleCommand(*args: Any, **kwargs: Any)

Bases: [GoToIdleCommand](#)

A class for the Vcc's GoToIdle command.

do() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Stateless hook for GoToIdle() command functionality.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

class UpdateDopplerPhaseCorrectionCommand(*args: Any, **kwargs: Any)

Bases: [BaseCommand](#)

A class for the Vcc's UpdateDopplerPhaseCorrection() command.

Update Vcc's doppler phase correction.

is_allowed() → [bool](#)

Determine if UpdateDopplerPhaseCorrection is allowed (allowed when Devstate is ON and ObsState is READY OR SCANNING).

Returns

if UpdateDopplerPhaseCorrection is allowed

Return type

[bool](#)

do(argin: str) → [None](#)

Stateless hook for UpdateDopplerPhaseCorrection() command functionality.

Parameters

argin – the doppler phase correction JSON

class UpdateDelayModelCommand(*args: Any, **kwargs: Any)

Bases: BaseCommand

A class for the Vcc's UpdateDelayModel() command.

Update Vcc's delay model.

is_allowed() → bool

Determine if UpdateDelayModel is allowed (allowed when Devstate is ON and ObsState is READY OR SCANNING).

Returns

if UpdateDelayModel is allowed

Return type

bool

do(argin: str) → None

Stateless hook for UpdateDelayModel() command functionality.

Parameters

argin – the delay model JSON

class UpdateJonesMatrixCommand(*args: Any, **kwargs: Any)

Bases: BaseCommand

A class for the Vcc's UpdateJonesMatrix() command.

Update Vcc's Jones matrix.

is_allowed() → bool

Determine if UpdateJonesMatrix is allowed (allowed when Devstate is ON and ObsState is READY OR SCANNING).

Returns

if UpdateJonesMatrix is allowed

Return type

bool

do(argin: str) → None

Stateless hook for UpdateJonesMatrix() command functionality.

Parameters

argin – the Jones Matrix JSON

class ConfigureSearchWindowCommand(*args: Any, **kwargs: Any)

Bases: ResponseCommand

A class for the Vcc's ConfigureSearchWindow() command.

Configure a search window by sending parameters from the input(JSON) to SearchWindow device. This function is called by the subarray after the configuration has already been validated.

is_allowed() → bool

Determine if ConfigureSearchWindow is allowed (allowed if DevState is ON and ObsState is CONFIGURING)

Returns

if ConfigureSearchWindow is allowed

Return type

bool

validate_input(argin: str) → Tuple[bool, str]

Validate a search window configuration

Parameters

argin – JSON object with the search window parameters

do(*argin: str*) → **Tuple**[ska_tango_base.commands.ResultCode, *str*]

Stateless hook for ConfigureSearchWindow() command functionality.

Parameters

argin – JSON object with the search window parameters

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(ResultCode, *str*)

6.5.2 VccComponentManager Class

class ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager(*args: *Any*, **kwargs: *Any*)

Bases: *CbfComponentManager*, CspObsComponentManager

Component manager for Vcc class.

property config_id: *str*

Configuration ID

Returns

the configuration ID

property scan_id: *int*

Scan ID

Returns

the scan ID

property receptor_id: *int*

Receptor ID

Returns

the receptor ID

property frequency_offset_k: *int*

Frequency Offset K-value for this receptor

Returns

the frequency offset k-value

property frequency_offset_delta_f: *int*

Frequency Offset Delta-F Value for this receptor

Returns

the frequency offset delta-f value

property frequency_band: *int*

Frequency Band

Returns

the frequency band as the integer index in an array of frequency band labels: ["1", "2", "3", "4", "5a", "5b"]

property stream_tuning: `List[float]`

Band 5 Stream Tuning

Returns

the band 5 stream tuning

property frequency_band_offset_stream_1: `int`

Frequency Band Offset Stream 1

Returns

the frequency band offset for stream 1

property frequency_band_offset_stream_2: `int`

Frequency Band Offset Stream 2

Returns

the frequency band offset for stream 2, this is only use when band 5 is active

property rfi_flagging_mask: `str`

RFI Flagging Mask

Returns

the RFI flagging mask

property jones_matrix: `str`

Jones Matrix

Returns

the last received Jones matrix

property delay_model: `str`

Delay Model

Returns

the last received delay model

property doppler_phase_correction: `List[float]`

Doppler Phase Correction

Returns

the last received Doppler phase correction array

property simulation_mode: `ska_tango_base.control_model.SimulationMode`

Get the simulation mode of the component manager.

Returns

simulation mode of the component manager

start_communicating() → `None`

Establish communication with the component, then start monitoring.

stop_communicating() → `None`

Stop communication with the component.

on() → `Tuple[skatango_base.commands.ResultCode, str]`

Turn on VCC component. This attempts to establish communication with the VCC devices on the HPS.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

Raises

[ConnectionError](#) – if unable to connect to HPS VCC devices

off() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Turn off VCC component; currently unimplemented.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

standby() → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Turn VCC component to standby; currently unimplemented.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

configure_band(freq_band_name: [str](#)) → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Configure the corresponding band. At the HPS level, this reconfigures the FPGA to the correct bitstream and enables the respective band device. All other band devices are disabled.

Parameters

freq_band_name – the frequency band name

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

deconfigure() → [None](#)

Deconfigure scan configuration parameters.

configure_scan(argin: [str](#)) → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Execute configure scan operation.

Parameters

argin – JSON string with the configure scan parameters

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

([ResultCode](#), [str](#))

scan(scan_id: [int](#)) → [Tuple](#)[[ska_tango_base.commands.ResultCode](#), [str](#)]

Begin scan operation.

Parameters

argin – scan ID integer

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

end_scan() → `Tuple[ska_tango_base.commands.ResultCode, str]`

End scan operation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

abort()

Tell the current VCC band device to abort whatever it was doing.

obsreset()

Reset the configuration.

configure_search_window(*argin: str*) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Configure a search window by sending parameters from the input(JSON) to SearchWindow self. This function is called by the subarray after the configuration has already been validated, so the checks here have been removed to reduce overhead.

Parameters

argin – JSON string with the search window parameters

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(`ResultCode`, `str`)

update_doppler_phase_correction(*argin: str*) → `None`

Update Vcc's doppler phase correction

Parameters

argin – the doppler phase correction JSON string

update_delay_model(*argin: str*) → `None`

Update Vcc's delay model

Parameters

argin – the delay model JSON string

update_jones_matrix(*argin: str*) → `None`

Update Vcc's jones matrix

Parameters

argin – the jones matrix JSON string

6.6 PowerSwitch

6.6.1 PowerSwitch Device

class `ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch(*args: Any, **kwargs: Any)`

Bases: `SKABaseDevice`

TANGO device class for controlling and monitoring the web power switch that distributes power to the Talon LRUs.

always_executed_hook() → `None`

Hook to be executed before any attribute access or command.

delete_device() → `None`

Uninitialize the device.

create_component_manager() → *PowerSwitchComponentManager*

Create and return a component manager for this device.

Returns

a component manager for this device

init_command_objects() → `None`

Sets up the command objects.

write_simulationMode(value: *ska_tango_base.control_model.SimulationMode*) → `None`

Set the simulation mode of the device. When simulation mode is set to True, the power switch software simulator is used in place of the hardware. When simulation mode is set to False, the real power switch driver is used.

Parameters

value – *SimulationMode*

read_numOutlets() → `int`

Get the number of outlets.

Returns

number of outlets

read_isCommunicating() → `bool`

Get whether or not the power switch is communicating.

Returns

True if power switch can be contacted, False if not

class `InitCommand(*args: Any, **kwargs: Any)`

Bases: `InitCommand`

A class for the PowerSwitch's `init_device()` “command”.

do() → `Tuple[ska_tango_base.commands.ResultCode, str]`

Stateless hook for device initialisation.

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

class TurnOnOutletCommand(*args: *Any*, **kwargs: *Any*)

Bases: ResponseCommand

The command class for the TurnOnOutlet command.

Turn on an individual outlet, specified by the outlet ID (range 0 to numOutlets - 1).

do(argin: *int*) → Tuple[*ska_tango_base.commands.ResultCode*, *str*]

Implement TurnOnOutlet command functionality.

Parameters

argin – the outlet ID of the outlet to switch on

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

class TurnOffOutletCommand(*args: *Any*, **kwargs: *Any*)

Bases: ResponseCommand

The command class for the TurnOffOutlet command.

Turn off an individual outlet, specified by the outlet ID (range 0 to numOutlets - 1).

do(argin: *int*) → Tuple[*ska_tango_base.commands.ResultCode*, *str*]

Implement TurnOffOutlet command functionality.

Parameters

argin – the outlet ID of the outlet to switch off

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

class GetOutletPowerModeCommand(*args: *Any*, **kwargs: *Any*)

Bases: BaseCommand

The command class for the GetOutletPowerMode command.

Get the power mode of an individual outlet, specified by the outlet ID (range 0 to numOutlets - 1).

do(argin: *int*) → *ska_tango_base.control_model.PowerMode*

Implement GetOutletPowerMode command functionality.

Parameters

argin – the outlet ID to get the state of

Returns

power mode of the outlet

6.6.2 PowerSwitchComponentManager Class

class *ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager*(*args: *Any*, **kwargs: *Any*)

Bases: *CbfComponentManager*

A component manager for the DLI web power switch. Calls either the power switch driver or the power switch simulator based on the value of simulation mode.

Parameters

- **simulation_mode** – simulation mode identifies if the real power switch driver or the simulator should be used
- **ip** – IP address of the power switch
- **logger** – a logger for this object to use

property num_outlets: `int`

Get number of outlets present in this power switch.

Returns

number of outlets

property is_communicating: `bool`

Returns whether or not the power switch can be communicated with.

Returns

whether the power switch is communicating

property simulation_mode: `ska_tango_base.control_model.SimulationMode`

Get the simulation mode of the component manager.

Returns

simulation mode of the component manager

start_communicating() → `None`

Perform any setup needed for communicating with the power switch.

stop_communicating() → `None`

Stop communication with the component.

get_outlet_power_mode(outlet: int) → `ska_tango_base.control_model.PowerMode`

Get the power mode of a specific outlet.

Parameters

outlet – outlet ID

Returns

power mode of the outlet

Raises

AssertionError – if outlet ID is out of bounds

turn_on_outlet(outlet: int) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Tell the DLI power switch to turn on a specific outlet.

Parameters

outlet – outlet ID to turn on

Returns

a tuple containing a return code and a string message indicating status

Raises

AssertionError – if outlet ID is out of bounds

turn_off_outlet(outlet: int) → `Tuple[ska_tango_base.commands.ResultCode, str]`

Tell the DLI power switch to turn off a specific outlet.

Parameters

outlet – outlet ID to turn off

Returns

a tuple containing a return code and a string message indicating status

Raises

AssertionError – if outlet ID is out of bounds

6.6.3 PowerSwitchDriver

class ska_mid_cbf_mcs.power_switch.power_switch_driver.**PowerSwitchDriver**(*ip: str, logger: Logger*)

Bases: **object**

A driver for the DLI web power switch.

Parameters

- **ip** – IP address of the power switch
- **logger** – a logger for this object to use

power_mode_conversion = [ska_tango_base.control_model.PowerMode.OFF, ska_tango_base.control_model.PowerMode.ON]

Conversion between PowerMode and outlet state response

query_timeout_s = 4

Timeout in seconds used when waiting for a reply from the power switch

initialize() → **None**

Initializes any variables needed for further communication with the power switch. Should be called once before any of the other methods.

property num_outlets: int

Get number of outlets present in this power switch.

Returns

number of outlets

property is_communicating: bool

Returns whether or not the power switch can be communicated with.

Returns

whether the power switch is communicating

get_outlet_power_mode(outlet: int) → ska_tango_base.control_model.PowerMode

Get the power mode of a specific outlet.

Parameters

outlet – outlet ID

Returns

power mode of the outlet

Raises

- **AssertionError** – if outlet ID is out of bounds
- **AssertionError** – if outlet power mode is different than expected

turn_on_outlet(outlet: int) → tuple[ResultCode, str]

Tell the DLI power switch to turn on a specific outlet.

Parameters

outlet – outlet ID to turn on

Returns

a tuple containing a return code and a string message indicating status

Raises

AssertionError – if outlet ID is out of bounds

turn_off_outlet(*outlet: int*) → tuple[ResultCode, str]

Tell the DLI power switch to turn off a specific outlet.

Parameters

outlet – outlet ID to turn off

Returns

a tuple containing a return code and a string message indicating status

Raises

AssertionError – if outlet ID is out of bounds

get_outlet_list()

Query the power switch for a list of outlets and get their name and current state.

Returns

list of all the outlets available in this power switch, or an empty list if there was an error

6.6.4 PowerSwitchSimulator

```
class ska_mid_cbf_mcs.power_switch.power_switch_simulator.PowerSwitchSimulator(logger:
    Logger)
```

Bases: **object**

A simulator for the power switch.

Parameters

logger – a logger for this object to use

property num_outlets: int

Get number of outlets present in this power switch.

Returns

number of outlets

property is_communicating: bool

Returns whether or not the power switch can be communicated with.

Returns

simulator always returns True

get_outlet_power_mode(*outlet: int*) → ska_tango_base.control_model.PowerMode

Get the power mode of a specific outlet.

Parameters

outlet – outlet ID

Returns

power mode of the outlet

Raises

AssertionError – if outlet ID is out of bounds

turn_on_outlet(*outlet: int*) → tuple[ResultCode, str]

Turn on a specific outlet.

Parameters

outlet – outlet ID to turn on

Returns

a tuple containing a return code and a string message indicating status

Raises

AssertionError – if outlet ID is out of bounds

turn_off_outlet(*outlet: int*) → tuple[ResultCode, str]

Turn off a specific outlet.

Parameters

outlet – outlet ID to turn off

Returns

a tuple containing a return code and a string message indicating status

Raises

AssertionError – if outlet ID is out of bounds

get_outlet_list()

Returns a list of 8 outlets, containing their name and current state. The current state is always set to OFF.

Returns

list of all the outlets available in this power switch

6.7 TalonLRU

6.7.1 TalonLRU Device

class ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU(*args: Any, **kwargs: Any)

Bases: SKABaseDevice

TANGO device class for controlling and monitoring a Talon LRU.

always_executed_hook() → None

Hook to be executed before any attribute access or command.

delete_device() → None

Uninitialize the device.

init_command_objects() → None

Sets up the command objects.

read_PDU1PowerMode() → ska_tango_base.control_model.PowerMode

Read the power mode of the outlet specified by PDU 1.

Returns

Power mode of PDU 1

read_PDU2PowerMode() → ska_tango_base.control_model.PowerMode

Read the power mode of the outlet specified by PDU 2.

Returns

Power mode of PDU 2

create_component_manager() → *TalonLRUComponentManager*

Create and return a component manager for this device.

Returns

a component manager for this device.

class InitCommand(*args: *Any*, **kwargs: *Any*)

Bases: *InitCommand*

A class for the TalonLRU's init_device() "command".

do() → *Tuple*[*ska_tango_base.commands.ResultCode*, *str*]

Stateless hook for device initialisation. Creates the device proxies to the power switch devices.

Returns

A Tuple containing a return code and a string message indicating status. The message is for information purpose only.

class OnCommand(*args: *Any*, **kwargs: *Any*)

Bases: *OnCommand*

The command class for the On command.

Turn on both outlets that provide power to the LRU. Device is put into ON state if at least one outlet was successfully turned on.

do() → *Tuple*[*ska_tango_base.commands.ResultCode*, *str*]

Implement On command functionality.

Returns

A Tuple containing a return code and a string message indicating status. The message is for information purpose only.

class OffCommand(*args: *Any*, **kwargs: *Any*)

Bases: *OffCommand*

The command class for the Off command.

Turn off both outlets that provide power to the LRU. Device is put in the OFF state if both outlets were successfully turned off.

do() → *Tuple*[*ska_tango_base.commands.ResultCode*, *str*]

Implement Off command functionality.

Returns

A Tuple containing a return code and a string message indicating status. The message is for information purpose only.

6.7.2 TalonLRUComponentManager Class

class *ska_mid_cbf_mcs.talon_lru.talon_lru_component_manager.TalonLRUComponentManager*(*args: *Any*, **kwargs: *Any*)

Bases: *CbfComponentManager*

A component manager for the TalonLRU device.

start_communicating() → *None*

Establish communication with the component, then start monitoring.

stop_communicating() → *None*

Stop communication with the component.

get_device_proxy(fqdn: str) → CbfDeviceProxy | *None*

Attempt to get a device proxy of the specified device.

Parameters

fqdn – FQDN of the device to connect to

Returns

CbfDeviceProxy to the device or *None* if no connection was made

check_power_mode(state: tango.DevState) → *None*

Get the power mode of both PDUs and check that it is consistent with the current device state.

Parameters

state – device operational state

on() → *Tuple*[ska_tango_base.commands.ResultCode, str]

Turn on the TalonLRU and its subordinate devices

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(*ResultCode*, str)

off() → *Tuple*[ska_tango_base.commands.ResultCode, str]

Turn off the TalonLRU and its subordinate devices

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(*ResultCode*, str)

standby() → *Tuple*[ska_tango_base.commands.ResultCode, str]

Turn the TalonLRU into low power standby mode

Returns

A tuple containing a return code and a string message indicating status. The message is for information purpose only.

Return type

(*ResultCode*, str)

6.8 TalonDxLogConsumer

6.8.1 TalonDxLogConsumer Class

```
class ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer_device.TalonDxLogConsumer(*args:
                                                    Any,
                                                    **kwargs:
                                                    Any)
```

Bases: SKABaseDevice

TANGO device class for consuming logs from the Tango devices run on the Talon boards, converting them to the SKA format, and outputting them via the logging framework.

create_component_manager()

Create the component manager LogComponentManager

Returns

Instance of LogComponentManager

Return type

LogComponentManager

Log(log_message: List[str])

Write the log to stdout as received from TLS

Sample log: ['1650964795495', 'ERROR', 'ska001/elt/master', 'TangoUtils::DeviceAttributeToCorbaAny() - A Message', '@7f48dcc80700 [7]']

Details of the list items here: <https://tango-controls.readthedocs.io/projects/rfc/en/latest/14/Logging.html#log-consumer>

Parameters

log_message (List[str]) – Parts of the TLS log message

SetTalonDxLogConsumerTarget(device_name: str) → None

Add TalonDxLogConsumer as a logging target destination on device

RemoveTalonDxLogConsumerTarget(device_name: str) → None

Remove TalonDxLogConsumer as a logging target destination on device

write_loggingLevel(value: ska_tango_base.control_model.LoggingLevel)

Sets logging level for the device. Both the Python logger and the Tango logger are updated. Overrides the base class attribute to accept all log levels coming from HPS devices, but still limit the logging level of TalonDxLogConsumer logs.

Parameters

value – Logging level for logger

Raises

LoggingLevelError – for invalid value

INDICES AND TABLES

- `genindex`
- `modindex`
- `search`

PYTHON MODULE INDEX

S

- `ska_mid_cbf_mcs.component.component_manager`,
27
- `ska_mid_cbf_mcs.controller`, 30
- `ska_mid_cbf_mcs.fsp`, 43
- `ska_mid_cbf_mcs.power_switch`, 84
- `ska_mid_cbf_mcs.power_switch.power_switch_driver`,
87
- `ska_mid_cbf_mcs.power_switch.power_switch_simulator`,
88
- `ska_mid_cbf_mcs.subarray`, 36
- `ska_mid_cbf_mcs.talon_lru`, 89
- `ska_mid_cbf_mcs.talondx_log_consumer`, 92
- `ska_mid_cbf_mcs.vcc`, 72

INDEX

Symbols

`_configure_hps_master()`
 (ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager
 method), 35
`_configure_talon_networking()`
 (ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager
 method), 35
`_copy_binaries_and_bitstream()`
 (ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager
 method), 35
`_create_hps_master_device_proxies()`
 (ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager
 method), 35
`_secure_copy()` (ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager
 method), 35
`_setup_tango_host_file()`
 (ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager
 method), 35
`_start_hps_master()`
 (ska_mid_cbf_mcs.controller.talondx_component_manager.TalonDxComponentManager
 method), 35
A
`abort()` (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
 method), 42
`abort()` (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
 method), 83
`add_receptors()` (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
 method), 42
`add_subarray_membership()`
 (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager
 method), 50
`AddSubarrayMembership()`
 (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
 46
`always_executed_hook()`
 (ska_mid_cbf_mcs.controller.controller_device.CbfControllerDevice
 method), 30
`always_executed_hook()`
 (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarrayDevice
 method), 52
`always_executed_hook()`
 (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
 43
`always_executed_hook()`
 (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarrayDevice
 method), 61
`always_executed_hook()`
 (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarrayDevice
 method), 67
`always_executed_hook()`
 (ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitchDevice
 method), 84
`always_executed_hook()`
 (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarrayDevice
 method), 36
`always_executed_hook()`
 (ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRUDevice
 method), 89
`always_executed_hook()`
 (ska_mid_cbf_mcs.vcc.vcc_device.VccDevice
 method), 72
B
`bandwidth` (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.CbfCorrSubarrayComponentManager
 property), 58
C
`calculate_fs_sample_rate()`
 (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
 method), 43
`calculate_fs_sample_rates()`
 (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
 method), 43
`CbfComponentManager` (class in
 ska_mid_cbf_mcs.component.component_manager),
 27
`CbfController` (class in
 ska_mid_cbf_mcs.controller.controller_device),
 30
`CbfController.InitCommand` (class in
 ska_mid_cbf_mcs.controller.controller_device),
 30

CbfController.OffCommand (class in *ska_mid_cbf_mcs.controller.controller_device*), 32
CbfController.OnCommand (class in *ska_mid_cbf_mcs.controller.controller_device*), 31
CbfController.StandbyCommand (class in *ska_mid_cbf_mcs.controller.controller_device*), 32
CbfSubarray (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 36
CbfSubarray.AddReceptorsCommand (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 38
CbfSubarray.ConfigureScanCommand (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 38
CbfSubarray.EndScanCommand (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 39
CbfSubarray.InitCommand (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 36
CbfSubarray.RemoveAllReceptorsCommand (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 38
CbfSubarray.RemoveReceptorsCommand (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 37
CbfSubarray.ScanCommand (class in *ska_mid_cbf_mcs.subarray.subarray_device*), 39
CbfSubarrayComponentManager (class in *ska_mid_cbf_mcs.subarray.subarray_component_manager*), 40
channel_averaging_map (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager* property), 59
check_power_mode() (*ska_mid_cbf_mcs.talon_lru.talon_lru_device* method), 91
communication_status (*ska_mid_cbf_mcs.component.component_manager* property), 27
component_fault_changed() (*ska_mid_cbf_mcs.component.component_manager* method), 28
component_power_mode_changed() (*ska_mid_cbf_mcs.component.component_manager* method), 28
config_id(*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager* property), 59
config_id(*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager* property), 65
config_id(*ska_mid_cbf_mcs.subarray.subarray_component_manager* property), 40
config_id(*ska_mid_cbf_mcs.vcc.vcc_component_manager* property), 80
configure_band() (*ska_mid_cbf_mcs.vcc.vcc_component_manager* method), 82
configure_scan() (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager* method), 60
configure_scan() (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager* method), 66
configure_scan() (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager* method), 71
configure_scan() (*ska_mid_cbf_mcs.subarray.subarray_component_manager* method), 41
configure_scan() (*ska_mid_cbf_mcs.vcc.vcc_component_manager* method), 82
configure_search_window() (*ska_mid_cbf_mcs.vcc.vcc_component_manager* method), 83
configure_talons() (*ska_mid_cbf_mcs.controller.talondx_component_manager* method), 35
ControllerComponentManager (class in *ska_mid_cbf_mcs.controller.controller_component_manager*), 32
create_component_manager() (*ska_mid_cbf_mcs.controller.controller_device.CbfController* method), 30
create_component_manager() (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarrayComponentManager* method), 52
create_component_manager() (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* method), 43
create_component_manager() (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarrayComponentManager* method), 61
create_component_manager() (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarrayComponentManager* method), 67
create_component_manager() (*BUComponentManager* method), 84
create_component_manager() (*ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitchComponentManager* method), 84
create_component_manager() (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* method), 36
create_component_manager() (*ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU* method), 90
create_component_manager() (*ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer_device.FspCorrSubarrayComponentManager* method), 52
create_component_manager() (*ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer_device.FspPssSubarrayComponentManager* method), 72

D

method), 44

deconfigure() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 41

deconfigure() (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager method), 82

delay_model (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager property), 49

delay_model (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager property), 81

delete_device() (ska_mid_cbf_mcs.controller.controller_device.CbfController method), 30

delete_device() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray method), 52

delete_device() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method), 43

delete_device() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray method), 61

delete_device() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray method), 67

delete_device() (ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch method), 84

delete_device() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray method), 36

delete_device() (ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLru method), 89

delete_device() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc method), 72

do() (ska_mid_cbf_mcs.controller.controller_device.CbfController.InitCommand method), 30

do() (ska_mid_cbf_mcs.controller.controller_device.CbfController.OffCommand method), 32

do() (ska_mid_cbf_mcs.controller.controller_device.CbfController.OnCommand method), 31

do() (ska_mid_cbf_mcs.controller.controller_device.CbfController.StandbyCommand method), 32

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.ConfigureScanCommand method), 56

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.EndScanCommand method), 56

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.GoToIdleCommand method), 57

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.InitCommand method), 52

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.OffCommand method), 55

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.OnCommand method), 55

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.ScanCommand method), 55

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.StandbyCommand method), 56

do() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray.StandbyCommand method), 55

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.AddSubarrayMembershipCommand method), 46

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.InitCommand method), 44

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.OffCommand method), 45

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.OnCommand method), 45

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.RemoveSubarrayMembershipCommand method), 46

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.SetFunctionModeCommand method), 45

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.StandbyCommand method), 45

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.UpdateDelayModelCommand method), 48

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.UpdateJonesMatrixCommand method), 47

do() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp.UpdateTimingBeamWeightsCommand method), 48

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.Conf method), 63

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.End method), 64

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.GoTo method), 64

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.InitC method), 61

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.OffC method), 63

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.OnC method), 63

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.Scar method), 64

do() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray.Stan method), 63

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.Conf method), 69

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.EndS method), 70

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.GoTo method), 70

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.InitC method), 67

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.OffC method), 68

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.OnC method), 68

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.Scan method), 69

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.Stan method), 69

do() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray.Stan method), 69

do() (ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch.C method), 85

do() (ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch.I method), 84

do() (ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch.T method), 84

```

        method), 85
do() (ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch.OnOutletCommand
    method), 85
do() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.AddReceptorsCommand
    method), 38
do() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.ConfigureScanCommand
    method), 39
do() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.EndScanCommand
    method), 39
do() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.InitCommand
    method), 72
do() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.RemoveAllReceptorsCommand
    method), 38
do() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.RemoveReceptorsCommand
    method), 38
do() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray.ScanCommand
    method), 39
do() (ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU.InitCommand
    method), 90
do() (ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU.OffCommand
    method), 90
do() (ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU.OnCommand
    method), 90
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.AbortCommand
    method), 78
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ConfigureBandCommand
    method), 76
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ConfigureScanCommand
    method), 77
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ConfigureSearchWindowCommand
    method), 80
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.EndScanCommand
    method), 77
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.GoToIdleCommand
    method), 78
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.InitCommand
    method), 75
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ObsResetCommand
    method), 78
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.OffCommand
    method), 76
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.OnCommand
    method), 76
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ScanCommand
    method), 77
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.StandbyCommand
    method), 76
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.UpdateDelayModelCommand
    method), 79
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.UpdateDopplerPhaseCorrectionCommand
    method), 78
do() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.UpdateJonesMatrixCommand
    method), 79
doppler_phase_correction
    (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
        property), 81
    EndScanCommand
    (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.Fsp
        property), 58
    EndScanCommand
    (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.Fsp
        property), 58
    EndScanCommand
    (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.Fsp
        property), 58
    EndScanCommand
    (ska_mid_cbf_mcs.subarray.subarray_component_manager.Fsp
        property), 40
    EndScanCommand
    (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
        property), 80
    frequency_band_offset_stream_1
    (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.Fsp
        property), 58
    frequency_band_offset_stream_1
    (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
        property), 81
    frequency_band_offset_stream_2
    (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.Fsp
        property), 58
    frequency_band_offset_stream_2
    (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
        property), 81
    frequency_offset_delta_f
    (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
        property), 80
    frequency_offset_k
    (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
        property), 80
    frequency_slice_id
    (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.Fsp
        property), 58
Fsp (class in ska_mid_cbf_mcs.fsp.fsp_device), 43
Fsp.AddSubarrayMembershipCommand (class in
    ska_mid_cbf_mcs.fsp.fsp_device), 46
Fsp.InitCommand (class in
    ska_mid_cbf_mcs.fsp.fsp_device), 44
Fsp.OffCommand (class in
    ska_mid_cbf_mcs.fsp.fsp_device), 45
Fsp.OnCommand (class in
    ska_mid_cbf_mcs.fsp.fsp_device), 45
Fsp.RemoveSubarrayMembershipCommand (class in
    ska_mid_cbf_mcs.fsp.fsp_device), 46

```


| | | | |
|--------------------------------------|--|-------------------------------------|--|
| Fsp.SetFunctionModeCommand | (class in ska_mid_cbf_mcs.fsp.fsp_device), 45 | FspPssSubarray | (class in ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device), 61 |
| Fsp.StandbyCommand | (class in ska_mid_cbf_mcs.fsp.fsp_device), 45 | FspPssSubarray.ConfigureScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device), 63 |
| Fsp.UpdateDelayModelCommand | (class in ska_mid_cbf_mcs.fsp.fsp_device), 47 | FspPssSubarray.EndScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device), 64 |
| Fsp.UpdateJonesMatrixCommand | (class in ska_mid_cbf_mcs.fsp.fsp_device), 47 | FspPssSubarray.GoToIdleCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device), 64 |
| Fsp.UpdateTimingBeamWeightsCommand | (class in ska_mid_cbf_mcs.fsp.fsp_device), 48 | FspPssSubarray.InitCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device), 61 |
| fsp_channel_offset | (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager property), 58 | FspPstSubarray | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 67 |
| fsp_health_state | (ska_mid_cbf_mcs.subarray.subarray_component_manager property), 40 | FspPstSubarray.ConfigureScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 69 |
| fsp_id | (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager property), 65 | FspPstSubarray.EndScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 70 |
| fsp_id | (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager property), 70 | FspPstSubarray.GoToIdleCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 70 |
| fsp_list | (ska_mid_cbf_mcs.subarray.subarray_component_manager property), 40 | FspPstSubarray.InitCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 67 |
| fsp_state | (ska_mid_cbf_mcs.subarray.subarray_component_manager property), 40 | FspPstSubarray.OffCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspComponentManager | (class in ska_mid_cbf_mcs.fsp.fsp_component_manager), 49 | FspPstSubarray.OnCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 52 | FspPstSubarray.ScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.ConfigureScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 56 | FspPstSubarray.OffCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.EndScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 56 | FspPstSubarray.OnCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.GoToIdleCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 57 | FspPstSubarray.ScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.InitCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 52 | FspPstSubarray.OffCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.OffCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 55 | FspPstSubarray.OnCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.OnCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 55 | FspPstSubarray.ScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.ScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 56 | FspPstSubarray.OffCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarray.StandbyCommand | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device), 55 | FspPstSubarray.OnCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |
| FspCorrSubarrayComponentManager | (class in ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager), 58 | FspPstSubarray.ScanCommand | (class in ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), 68 |

```

69      init_command_objects()
FspPstSubarray.StandbyCommand (class in (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPssSubarray
ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device), method), 61
69      init_command_objects()
FspPstSubarrayComponentManager (class in (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray
ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager), method), 67
70      init_command_objects()
function_mode(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager, power_switch.power_switch_device.PowerSwitch
property), 49
method), 84
init_command_objects()
(ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray
method), 36
get_device_proxy() (ska_mid_cbf_mcs.talon_lru.talon_lru_component_manager.TalonLRUComponentManager
method), 91
init_command_objects()
get_fsp_corr_config_id() (ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU
(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager
method), 89
method), 51
init_command_objects()
get_num_capabilities() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc
(ska_mid_cbf_mcs.controller.controller_device.CbfController
method), 72
method), 30
initialize() (ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver
method), 87
get_outlet_list() (ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver
method), 88
integration_factor(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager
method), 58
get_outlet_list() (ska_mid_cbf_mcs.power_switch.power_switch_simulator.PowerSwitchSimulator
method), 89
is_AddSubarrayMembership_allowed()
get_outlet_power_mode() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
(ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager
method), 46
method), 86
is_allowed() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ConfigureSearchWindow
method), 79
get_outlet_power_mode() (ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver
method), 79
(ska_mid_cbf_mcs.vcc.vcc_device.Vcc.UpdateDelayModel
method), 79
get_outlet_power_mode() is_allowed() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.UpdateDopplerPhase
(ska_mid_cbf_mcs.power_switch.power_switch_simulator.PowerSwitchSimulator
method), 78
method), 88
is_allowed() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.UpdateJonesMatrix
method), 79
getConfigID() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp
method), 47
is_communicating(ska_mid_cbf_mcs.component.component_manager.ComponentManager
property), 27
getLinkAndAddress() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
is_communicating(ska_mid_cbf_mcs.power_switch.power_switch_component_manager.FspPowerSwitchComponentManager
method), 57
property), 86
go_to_idle() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager
is_communicating(ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver
method), 60
property), 87
go_to_idle() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.FspPssSubarrayComponentManager
is_communicating(ska_mid_cbf_mcs.power_switch.power_switch_simulator.PowerSwitchSimulator
method), 66
property), 88
go_to_idle() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager
is_getLinkAndAddress_allowed()
(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
method), 72
method), 57
| is_RemoveSubarrayMembership_allowed()
init_command_objects() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
(ska_mid_cbf_mcs.controller.controller_device.CbfController
method), 30
is_SetFunctionMode_allowed()
init_command_objects() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
method), 46
is_UpdateDelayModel_allowed()
init_command_objects() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
(ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
48
43 is_UpdateJonesMatrix_allowed()

```

(ska_mid_cbf_mcs.fsp.fsp_device.Fsp method), 47
is_UpdateTimingBeamWeights_allowed() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method), 48
J
jones_matrix(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager property), 49
jones_matrix(ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager property), 81
L
Log() (ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer_device.TalonDxLogConsumer method), 92
M
module
ska_mid_cbf_mcs.component.component_manager, 27
ska_mid_cbf_mcs.controller, 30
ska_mid_cbf_mcs.fsp, 43
ska_mid_cbf_mcs.power_switch, 84
ska_mid_cbf_mcs.power_switch.power_switch_driver, 87
ska_mid_cbf_mcs.power_switch.power_switch_simulator, 88
ska_mid_cbf_mcs.subarray, 36
ska_mid_cbf_mcs.talon_lru, 89
ska_mid_cbf_mcs.talondx_log_consumer, 92
ska_mid_cbf_mcs.vcc, 72
N
num_outlets(ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager property), 86
num_outlets(ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver property), 87
num_outlets(ska_mid_cbf_mcs.power_switch.power_switch_simulator.PowerSwitchSimulator property), 88
O
obsreset() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 42
obsreset() (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager method), 83
off() (ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager method), 34
off() (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager method), 50
off() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 40
off() (ska_mid_cbf_mcs.talon_lru.talon_lru_component_manager.TalonLRUComponentManager method), 91
off() (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager method), 82
on() (ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager method), 34
on() (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager method), 50
on() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 40
on() (ska_mid_cbf_mcs.talon_lru.talon_lru_component_manager.TalonLRUComponentManager method), 91
on() (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager method), 81
output_enable(ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.FspPssSubarrayComponentManager property), 66
output_enable(ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager property), 71
output_link_map(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager property), 59
power_mode(ska_mid_cbf_mcs.component.component_manager.CbfComponentManager property), 28
power_mode_conversion (ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver attribute), 87
PowerSwitch (class in ska_mid_cbf_mcs.power_switch.power_switch_device), 84
PowerSwitch.GetOutletPowerModeCommand (class in ska_mid_cbf_mcs.power_switch.power_switch_device), 85
PowerSwitch.InitCommand (class in ska_mid_cbf_mcs.power_switch.power_switch_device), 84
PowerSwitch.TurnOffOutletCommand (class in ska_mid_cbf_mcs.power_switch.power_switch_device), 85
PowerSwitch.TurnOnOutletCommand (class in ska_mid_cbf_mcs.power_switch.power_switch_device), 84
PowerSwitchComponentManager (class in ska_mid_cbf_mcs.power_switch.power_switch_component_manager), 85
PowerSwitchDriver (class in ska_mid_cbf_mcs.power_switch.power_switch_driver), 87
PowerSwitchSimulator (class in ska_mid_cbf_mcs.power_switch.power_switch_simulator), 88
query_timeout_s(ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver attribute), 87

R

[raise_configure_scan_fatal_error\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager* method), 41
[read_band5Tuning\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 52
[read_band5Tuning\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 74
[read_channelAveragingMap\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 53
[read_commandProgress\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* method), 30
[read_configID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 55
[read_configID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* method), 44
[read_configID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray* method), 62
[read_configID\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 75
[read_corrBandwidth\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 53
[read_delayModel\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* method), 44
[read_delayModel\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 75
[read_dopplerPhaseCorrection\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 74
[read_frequencyBand\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 52
[read_frequencyBand\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* method), 36
[read_frequencyBand\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 74
[read_frequencyBandOffsetStream1\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 53
[read_frequencyBandOffsetStream1\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 74
[read_frequencyBandOffsetStream2\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 53
[read_frequencyBandOffsetStream2\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 74
[read_frequencyOffsetDeltaF\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* method), 31
[read_frequencyOffsetDeltaF\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* method), 37
[read_frequencyOffsetDeltaF\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 73
[read_frequencyOffsetK\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* method), 31
[read_frequencyOffsetK\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* method), 37
[read_frequencyOffsetK\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 73
[read_frequencySliceID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 53
[read_fspChannelOffset\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 54
[read_fspHealthState\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* method), 37
[read_fspList\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* method), 37
[read_fspState\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* method), 37
[read_functionMode\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* method), 43
[read_integrationFactor\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 53
[read_isCommunicating\(\)](#) (*ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch* method), 84
[read_jonesMatrix\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* method), 44
[read_jonesMatrix\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* method), 75
[read_numOutlets\(\)](#) (*ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch* method), 84
[read_outputEnable\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray* method), 62
[read_outputEnable\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray* method), 67
[read_outputLinkMap\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* method), 54

[read_PDU1PowerMode\(\)](#) (*method*), 74
[read_PDU1PowerMode\(\)](#) (*ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU* *method*), 89
[read_PDU2PowerMode\(\)](#) (*ska_mid_cbf_mcs.talon_lru.talon_lru_device.TalonLRU* *method*), 89
[read_receptorID\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* *method*), 73
[read_receptors\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* *method*), 52
[read_receptors\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray* *method*), 61
[read_receptors\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray* *method*), 67
[read_receptors\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* *method*), 36
[read_receptorToVcc\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 30
[read_reportFSPAdminMode\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_reportFSPHealthState\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_reportFSPState\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_reportFSPSubarrayMembership\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_reportSubarrayAdminMode\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_reportSubarrayHealthState\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_reportSubarrayState\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_reportVCCAdminMode\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 30
[read_reportVCCHealthState\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 30
[read_reportVCCState\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 30
[read_reportVCCSubarrayMembership\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 31
[read_rfiFlaggingMask\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* *property*), 60
[read_scanID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* *method*), 54
[read_scanID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* *method*), 43
[read_scanID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray* *method*), 62
[read_scanID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray* *method*), 62
[read_scanID\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* *method*), 62
[read_searchBeamID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray* *method*), 61
[read_searchBeamID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray* *method*), 61
[read_searchWindowID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray* *method*), 62
[read_subarrayconfigID\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 30
[read_subarrayMembership\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* *method*), 43
[read_subarrayMembership\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_device.Vcc* *method*), 73
[read_timingBeamID\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray* *method*), 68
[read_timingBeams\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray* *method*), 68
[read_timingBeamWeights\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_device.Fsp* *method*), 44
[read_vccHealthState\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* *method*), 37
[read_vccState\(\)](#) (*ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray* *method*), 37
[read_vccToReceptor\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 30
[read_vccToReceptor\(\)](#) (*ska_mid_cbf_mcs.controller.controller_device.CbfController* *method*), 30
[read_vccToDestinationAddress\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* *method*), 54
[read_vccToWindowTuning\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray* *method*), 53
[read_vccToWindowTuning\(\)](#) (*ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager* *property*), 80
[receptors\(\)](#) (*ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager* *property*), 60

```

receptors(ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.CbfSubarrayComponentManager
property), 66
receptors(ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.CbfSubarrayComponentManager
property), 71
receptors(ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
property), 40
remove_all_receptors()
(ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
method), 41
remove_receptors() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
method), 41
remove_subarray_membership()
(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager
method), 50
RemoveReceptors() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarrayComponentManager
method), 38
RemoveSubarrayMembership()
(ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
47
RemoveTalonDxLogConsumerTarget()
(ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer_device.TalonDxLogConsumer
method), 92
report_fsp_admin_mode
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_fsp_health_state
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_fsp_state(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_fsp_subarray_membership
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_subarray_admin_mode
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_subarray_config_id
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_subarray_health_state
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_subarray_state
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 33
report_vcc_admin_mode
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 32
report_vcc_health_state
(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 32
report_vcc_state(ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager
property), 32
report_vcc_subarray_membership
module, 30
receptors(ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.CbfSubarrayComponentManager
property), 33
receptors(ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.CbfSubarrayComponentManager
method), 42
receptors(ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
property), 81
scan() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager
method), 46
scan() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.FspPssSubarrayComponentManager
method), 66
scan() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager
method), 72
scan() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
method), 42
scan() (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
method), 82
scan_id(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager
property), 59
scan_id(ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.FspPssSubarrayComponentManager
property), 65
scan_id(ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager
property), 72
scan_id(ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
property), 40
scan_id(ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
property), 80
search_beams(ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.CbfSubarrayComponentManager
property), 65
search_window_id(ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.CbfSubarrayComponentManager
property), 65
set_function_mode()
(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager
method), 51
set_function_mode(ska_mid_cbf_mcs.fsp.fsp_device.Fsp
method), 45
SetTalonDxLogConsumerTarget()
(ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer_device.TalonDxLogConsumer
method), 92
simulation_mode(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager
property), 45
simulation_mode(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager
property), 60
simulation_mode(ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager
property), 86
simulation_mode(ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager
property), 81
ska_mid_cbf_mcs.component.component_manager
module, 30

```

| | |
|---|--|
| ska_mid_cbf_mcs.fsp | (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager |
| module, 43 | method), 81 |
| ska_mid_cbf_mcs.power_switch | stop_communicating() |
| module, 84 | (ska_mid_cbf_mcs.component.component_manager.CbfComponentManager |
| ska_mid_cbf_mcs.power_switch.power_switch_driver | method), 27 |
| module, 87 | stop_communicating() |
| ska_mid_cbf_mcs.power_switch.power_switch_simulator | (ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager |
| module, 88 | method), 34 |
| ska_mid_cbf_mcs.subarray | stop_communicating() |
| module, 36 | (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager |
| ska_mid_cbf_mcs.talon_lru | method), 50 |
| module, 89 | stop_communicating() |
| ska_mid_cbf_mcs.talondx_log_consumer | (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager |
| module, 92 | method), 60 |
| ska_mid_cbf_mcs.vcc | stop_communicating() |
| module, 72 | (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.FspPssSubarrayComponentManager |
| standby() (ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager | method), 34 |
| standby() (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager | method), 50 |
| standby() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager | method), 60 |
| standby() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager | method), 71 |
| standby() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager | method), 40 |
| standby() (ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager | method), 86 |
| standby() (ska_mid_cbf_mcs.talon_lru.talon_lru_component_manager.TalonLRUComponentManager | method), 90 |
| standby() (ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer_component_manager.TalonDxLogConsumerComponentManager | method), 92 |
| standby() (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager | method), 82 |
| start_communicating() | stop_communicating() |
| (ska_mid_cbf_mcs.component.component_manager.CbfComponentManager | method), 27 |
| start_communicating() | stop_communicating() |
| (ska_mid_cbf_mcs.controller.controller_component_manager.ControllerComponentManager | method), 34 |
| start_communicating() | stream_tuning (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager |
| (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager | method), 50 |
| start_communicating() | stream_tuning (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager |
| (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.FspCorrSubarrayComponentManager | property), 60 |
| start_communicating() | subarray_membership |
| (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_component_manager.FspPssSubarrayComponentManager | method), 66 |
| start_communicating() | subarray_membership |
| (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager | method), 71 |
| start_communicating() | TalonDxComponentManager (class in |
| (ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager | method), 86 |
| start_communicating() | TalonDxLogConsumer (class in |
| (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager | method), 40 |
| start_communicating() | TalonLRU (class in ska_mid_cbf_mcs.talon_lru.talon_lru_device), |
| (ska_mid_cbf_mcs.talon_lru.talon_lru_component_manager.TalonLRUComponentManager | method), 90 |
| start_communicating() | TalonLRU (class in ska_mid_cbf_mcs.talon_lru.talon_lru_device), |
| | 90 |

TalonLRU.OffCommand (class in update_jones_matrix()
ska_mid_cbf_mcs.talon_lru.talon_lru_device), (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager method), 51

TalonLRU.OnCommand (class in update_jones_matrix()
ska_mid_cbf_mcs.talon_lru.talon_lru_device), (ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager method), 83

TalonLRUComponentManager (class in update_timing_beam_weights()
ska_mid_cbf_mcs.talon_lru.talon_lru_component_manager), (ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager method), 51

timing_beam_id (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager property), 71

timing_beam_weights UpdateJonesMatrix()
(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager method), 47

timing_beams (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_component_manager.FspPstSubarrayComponentManager property), 70

turn_off_outlet() (ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager method), 86

turn_off_outlet() (ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver method), 88

turn_off_outlet() (ska_mid_cbf_mcs.power_switch.power_switch_simulator.PowerSwitchSimulator method), 89

turn_on_outlet() (ska_mid_cbf_mcs.power_switch.power_switch_component_manager.PowerSwitchComponentManager method), 86

turn_on_outlet() (ska_mid_cbf_mcs.power_switch.power_switch_driver.PowerSwitchDriver method), 87

turn_on_outlet() (ska_mid_cbf_mcs.power_switch.power_switch_simulator.PowerSwitchSimulator method), 88

U

update_communication_status()
(ska_mid_cbf_mcs.component.component_manager.CbfComponentManager method), 27

update_component_configuration()
(ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 42

update_component_fault()
(ska_mid_cbf_mcs.component.component_manager.CbfComponentManager method), 28

update_component_power_mode()
(ska_mid_cbf_mcs.component.component_manager.CbfComponentManager method), 28

update_component_resources()
(ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 42

update_delay_model()
(ska_mid_cbf_mcs.fsp.fsp_component_manager.FspComponentManager method), 51

update_delay_model()
(ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager method), 83

update_doppler_phase_correction()
(ska_mid_cbf_mcs.vcc.vcc_component_manager.VccComponentManager method), 83

validate_input() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspPstSubarrayDevice method), 51

validate_input() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPstSubarrayDevice method), 63

validate_input() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarrayDevice method), 69

validate_input() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 39

validate_input() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ConfigureScanCommand method), 77

validate_input() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc.ConfigureSearchWindowCommand method), 79

validate_ip() (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager method), 40

Vcc (class in ska_mid_cbf_mcs.vcc.vcc_device), 72

Vcc.AbortCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 78

Vcc.ConfigureBandCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 76

Vcc.ConfigureScanCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 76

Vcc.ConfigureSearchWindowCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 79

Vcc.EndScanCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 77

Vcc.GoToIdleCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 78

Vcc.InitCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 75

Vcc.ObsResetCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 77

Vcc.OffCommand (class in ska_mid_cbf_mcs.vcc.vcc_device), 76

Vcc.OnCommand (class in write_loggingLevel() (ska_mid_cbf_mcs.talondx_log_consumer.talondx_log_consumer
ska_mid_cbf_mcs.vcc.vcc_device), 75
Vcc.ScanCommand (class in method), 92
ska_mid_cbf_mcs.vcc.vcc_device), 77 write_outputLinkMap()
Vcc.StandbyCommand (class in (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
ska_mid_cbf_mcs.vcc.vcc_device), 76 method), 54
Vcc.UpdateDelayModelCommand (class in write_receptorID() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc
ska_mid_cbf_mcs.vcc.vcc_device), 78 method), 73
Vcc.UpdateDopplerPhaseCorrectionCommand (class write_receptors() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray
in ska_mid_cbf_mcs.vcc.vcc_device), 78 method), 68
Vcc.UpdateJonesMatrixCommand (class in write_receptors() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray
ska_mid_cbf_mcs.vcc.vcc_device), 79 method), 36
vcc_health_state (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarrayComponentManager
property), 40 write_scanID() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
method), 55
vcc_state (ska_mid_cbf_mcs.subarray.subarray_component_manager.CbfSubarrayComponentManager
property), 40 write_scanID() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray
method), 62
VccComponentManager (class in write_scanID() (ska_mid_cbf_mcs.fsp.fsp_pst_subarray_device.FspPstSubarray
ska_mid_cbf_mcs.vcc.vcc_component_manager), method), 68
80 write_simulationMode()
vis_destination_address (ska_mid_cbf_mcs.controller.controller_device.CbfController
(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component_manager.CbfCorrSubarrayComponentManager
property), 59 write_simulationMode()
(ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
method), 55
W write_simulationMode()
write_configID() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
method), 55 (ska_mid_cbf_mcs.fsp.fsp_device.Fsp method),
43
write_configID() (ska_mid_cbf_mcs.fsp.fsp_device.Fsp write_simulationMode()
method), 44 (ska_mid_cbf_mcs.power_switch.power_switch_device.PowerSwitch
method), 84
write_configID() (ska_mid_cbf_mcs.fsp.fsp_pss_subarray_device.FspPssSubarray
method), 62 write_simulationMode()
write_dopplerPhaseCorrection() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc
method), 74 (ska_mid_cbf_mcs.vcc.vcc_device.Vcc
method), 72
write_frequencyOffsetDeltaF() write_subarrayMembership()
(ska_mid_cbf_mcs.controller.controller_device.CbfController (ska_mid_cbf_mcs.vcc.vcc_device.Vcc
method), 31 method), 73
write_frequencyOffsetDeltaF() write_visDestinationAddress()
(ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
method), 37 method), 54
write_frequencyOffsetDeltaF() Z
(ska_mid_cbf_mcs.vcc.vcc_device.Vcc zoom_window_tuning (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_component
method), 73 property), 59
write_frequencyOffsetK() (ska_mid_cbf_mcs.controller.controller_device.CbfController
method), 31
write_frequencyOffsetK() (ska_mid_cbf_mcs.subarray.subarray_device.CbfSubarray
method), 37
write_frequencyOffsetK() (ska_mid_cbf_mcs.vcc.vcc_device.Vcc
method), 73
write_fspChannelOffset() (ska_mid_cbf_mcs.fsp.fsp_corr_subarray_device.FspCorrSubarray
method), 54